

品牌	菜单	应用
LUXGEN	LUXGEN5 SEDAN\Smart key	Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code,Delete ICU,Delete EMC,Delete EMC,Clear fault code,Program KCU,
	LUXGENMASTER CEO\Smart key	Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code,Delete ICU,Delete EMC,Delete EMC,Clear fault code,Program KCU,
	LUXGENU6 SUV\Smart key	Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code,Delete ICU,Delete EMC,Delete EMC,Clear fault code,Program KCU,
	LUXGEN7 MPV\Smart key	Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code,Delete ICU,Delete EMC,Delete EMC,Clear fault code,Program KCU,
	LUXGEN7 SUV\Smart key	Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code,Delete ICU,Delete EMC,Delete EMC,Clear fault code,Program KCU,
	LUXGENNew 7 MPV\Smart key	Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code,Delete ICU,Delete EMC,Delete EMC,Clear fault code,Program KCU,
	LUXGENNew 7 SUV\Smart key	Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code,Delete ICU,Delete EMC,Delete EMC,Clear fault code,Program KCU,
	LUXGENLUXGEN 5(new)\Smart key	Program smart key,PIN initialization,Program ICU,Program ECM,Detect learning status,Read pin code,Delete ICU,Delete EMC,Delete EMC,Clear fault code,Program KCU,
BAIC	BAIC\Immobilizer\BJ20	Program key,
	BAIC\Immobilizer\BJ40	Program key,
	BAIC\Immobilizer\BJ40L	Read key count,Program key,Delete key,
	BAIC\Immobilizer\BJ80	Program key,
	BAIC\Immobilizer\D20	Program key,Delete key,Check key status,Check immo lock,
	BAIC\Immobilizer\D50	Detect key count,Add key,Delete key,
	BAIC\Immobilizer\EU220	Add key,Delete key,
	BAIC\Immobilizer\EU260	Add key,Delete key,
	BAIC\Immobilizer\EV150	Program key,Delete key,
	BAIC\Immobilizer\EV150	Program key,Delete key,
	BAIC\Immobilizer\EV160	Program key,Delete key,
	BAIC\Immobilizer\EV200	Program key,Delete key,
	BAIC\Immobilizer\EX200	Program key,Delete key,
	BAIC\Immobilizer\EX260	Program key,Delete key,
	BAIC\Immobilizer\E series	Program key,Delete key,Check key status,Check immo lock,
	BAIC\Immobilizer\X25	Program key,Delete key,Check immo lock,
	BAIC\Immobilizer\X35	Program key,Delete key,Check immo lock,
	BAIC\Immobilizer\X55	Program key,Delete key,Check immo lock,
	BAIC\Immobilizer\X65	Program key,Delete key,Check immo lock,
	BAIC\Immobilizer\S50	Program key,Delete key,Check immo lock,
	BAIC\Immobilizer\H2	Program key,Delete key,Reset PIN code,Immo resetting(all key lost),Immobilization,Reset engine,Program engine,Clear fault code,
	BAIC\Immobilizer\H6	Program key,Delete key,Reset PIN code,Immo resetting(all key lost),Immobilization,Reset engine,Program engine,Clear fault code,
	BAIC\Immobilizer\S2	Program key,Delete key,Reset PIN code,Immo resetting(all key lost),Immobilization,Reset engine,Program engine,Clear fault code,
	BAIC\Immobilizer\S3	Program key,Delete key,Reset PIN code,Immo resetting(all key lost),Immobilization,Reset engine,Program engine,Clear fault code,
	BAIC\Immobilizer\S3L	Program key,Delete key,Reset PIN code,Immo resetting(all key lost),Immobilization,Reset engine,Program engine,Clear fault code,
	BAIC\Smart key\BJ20	Program key,
	BAIC\Smart key\BJ40	Program key,
	BAIC\Smart key\BJ80	Program key,
	BAIC\Smart key\CC(C60F)	Program key,

	BAIC\Smart key\D230	Program key,
	BAIC\Smart key\D280	Program key,
	BAIC\Smart key\D50(C50E)	Program key,
	BAIC\Smart key\D60	Program key,
	BAIC\Smart key\D61	Program key,
	BAIC\Smart key\D70(C70G)	Program key,
	BAIC\Smart key\D80(C80G)	Program key,
	BAIC\Smart key\X55	Program key,
	BAIC\Smart key\X65	Program key,
	BAIC\Smart key\S50	Program key,
	BAIC\Smart key\H2	Program smart key,
	BAIC\Smart key\H3	Program smart key,Program ESCL,
	BAIC\Smart key\H3F	Program smart key,Program ESCL,
	BAIC\Smart key\S3L	Program smart key,
	BAIC\Smart key\S5	Program smart key,Program ESCL,
	BAIC\Smart key\S6	Program smart key,
	BAIC\Remote\BJ40L	Program remote,
	BAIC\Remote\S6	Program remote,
BAOJUN	BAOJUN\Immobilizer\310	Check key count,Program key,Delete key,Reset engine ECM,Module programming,
	BAOJUN\Immobilizer\330	Check key count,Program key,Delete key,
	BAOJUN\Immobilizer\510	Check key count,Program key,Delete key,Reset engine ECM,Module programming,
	BAOJUN\Immobilizer\530	Check key count,Program key,Delete key,Reset engine ECM,Module programming,
	BAOJUN\Immobilizer\560	Check key count,Program key,Delete key,Reset engine ECM,Module programming,
	BAOJUN\Immobilizer\610	Read key count,Program key,Delete key,Program remote,
	BAOJUN\Immobilizer\630	Read key count,Program key,Delete key,Program remote,
	BAOJUN\Immobilizer\730	Check key count,Program key,Delete key,Reset engine ECM,Module programming,
	BAOJUN\Smart key\310 Wagon	Add key,All key lost,
	BAOJUN\Smart key\510	Add key,All key lost,
	BAOJUN\Smart key\560	Add key,All key lost,
	BAOJUN\Smart key\730	Add key,All key lost,
YEMA AUTO	YEMA AUTO\T70\PEPS	Program smart key,Program EMS,Program ESCL,Program PEPS,Reset EMS,Reset PEPS,
	YEMA AUTO\T70\BCM	Program remote,Read remote count,
	YEMA AUTO\T70\IMMO	Add key,Delete key,Replace ECM,Replace IMMO,Replace IMMO & ECM,Read key info.,
QOROS	QOROS\Smart key	Program 1 smart key,Program 2 smart keys,
	JAC\Remote\10 PIN\Type 1	Program remote,
	JAC\Remote\10 PIN\Type 2	Program remote,
	JAC\Remote\16 PIN\6S EV	Program remote,
	JAC\Remote\16 PIN\IEV5(EV)	Program remote,

JAC

JAC\Remote\16 PIN\Three-ring remote	Program remote,
JAC\Remote\16 PIN\Tongyue	Program remote,
JAC\Remote\16 PIN\RS\Ttype 1	Program remote,
JAC\Remote\16 PIN\RS\Ttype 2	Program remote,
JAC\Remote\16 PIN\RS A30(CVT)	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\Binyue	Program remote,
JAC\Remote\16 PIN\Sunray	Program remote,
JAC\Remote\16 PIN\Refine M3	Program remote,
JAC\Remote\16 PIN\Refine M4	Program remote,
JAC\Remote\16 PIN\Refine M5	Program remote,
JAC\Remote\16 PIN\Refine S2	Program remote,
JAC\Remote\16 PIN\Refine S2 mini	Program remote,
JAC\Remote\16 PIN\Refine S3	Program remote,
JAC\Remote\16 PIN\Refine S5	Program remote,
JAC\Remote\16 PIN\Refine S7	Program remote,
JAC\Remote\16 PIN\Refine M5	Program remote,
JAC\IMMO\Tongyue\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,
JAC\IMMO\Tongyue\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Delete key,
JAC\IMMO\Heyue A30\CVT\Smart PEPS	Read key count,ESCL learning,Add key,Program engine ECU,
JAC\IMMO\Heyue A30\CVT\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Delete key,
JAC\IMMO\Heyue A30\MT\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Delete key,
JAC\IMMO\Heyue RS\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,
JAC\IMMO\Heyue RS\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Delete key,
JAC\IMMO\Heyue sedan\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,
JAC\IMMO\Heyue sedan\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Delete key,
JAC\IMMO\Pinnacle\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,
JAC\IMMO\Yueyue\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,
JAC\IMMO\Yueyue\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Delete key,
JAC\IMMO\Sunray\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,
JAC\IMMO\Sunray\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Delete key,
JAC\IMMO\Sunray\IMMO	Read key count,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,
JAC\IMMO\Refine A60\Smart key	Program ESCL,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,Immobilization,Program engine,
JAC\IMMO\Heyue M3\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Delete key,
JAC\IMMO\Refine M4\IMMO	Read key count,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,
JAC\IMMO\Refine M5\Smart key	Program ESCL,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,Immobilization,Program engine,
JAC\IMMO\Refine S2 mini\IMMO	Read key count,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,
JAC\IMMO\Refine S2\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,
JAC\IMMO\Refine S2\Smart key	Program ESCL,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,Immobilization,Program engine,

	JAC\IMMO\Refine S2\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Delete key,	
	JAC\IMMO\Refine S3\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,	
	JAC\IMMO\Refine S3\Smart key	Program ESCL,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,Immobilization,Program engine,	
	JAC\IMMO\Refine S3\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Delete key,	
	JAC\IMMO\Refine S3\IMMO	Read key count,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,	
	JAC\IMMO\Refine S5\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,	
	JAC\IMMO\Refine S5\Smart key	Program ESCL,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,Immobilization,Program engine,	
	JAC\IMMO\Refine S5\UAES IMMO	Clear fault code,Read key count,Add key,Detect key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Delete key,	
	JAC\IMMO\Refine S5\IMMO	Read key count,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,	
	JAC\IMMO\Refine S7\Smart key	Program ESCL,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,Immobilization,Program engine,	
	JAC\IMMO\Refine S7\IMMO	Read key count,Add old key,Add new key,Delete key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,	
ROEWE	ROEWE\Read PIN code\550\2013-	Read PIN code,	
	ROEWE\Read PIN code\950\2012-	Read pin code type6 (via BCM),	
	ROEWE\Remote\360	Add remote,Delete remote,	
	ROEWE\Remote\750	Enable remote,Disable remote,Program remote,Clear fault code,	
	ROEWE\Remote\W5	Program remote,	
	ROEWE\IMMO\ERX5\Without smart	Delete key,Add key,Read key count,	
	ROEWE\IMMO\ERX5\With smart	Delete key,Add key,Read key count,	
	ROEWE\IMMO\350\ -2012	Add key,Delete key,Check lock time,	
	ROEWE\IMMO\350\2013 -	Add key,Delete key,Check lock time,	
	ROEWE\IMMO\360\Without smart	Add key,Delete key,Check lock time,	
	ROEWE\IMMO\360\With smart\2017	Add key,Delete key,	
	ROEWE\IMMO\550\ -2012	Delete key,Add key,	
	ROEWE\IMMO\550\2013 -	Add key,Delete key,The rest unlock time,	
	ROEWE\IMMO\750(new)\ -2012	Delete key,Add key,	
	ROEWE\IMMO\750(new)\2013 -	Add key,Delete key,The rest unlock time,	
	ROEWE\IMMO\950\Without smart\Type 1	All key lost,Read key count,Clear fault code,Add key,	
	ROEWE\IMMO\950\Without smart\Type 2	All key lost,Add key,Read key count,Clear fault code,	
	ROEWE\IMMO\950\With smart	All smart key lost,Read smart key count,Clear fault code,Add smart key,	
	ROEWE\IMMO\E50\ -2012	Add key,Delete key,Check lock time,	
	ROEWE\IMMO\E50\2013 -	Add key,Delete key,Check lock time,	
	ROEWE\IMMO\i6\With smart	Delete key,Read key count,Add key,	
	ROEWE\IMMO\IRX5\Without smart	Delete key,Add key,Read key count,	
	ROEWE\IMMO\IRX5\With smart	Delete key,Add key,Read key count,	
	ROEWE\IMMO\W5\ -2012	Add key,Delete key,Check lock time,	
	ROEWE\IMMO\W5\2013 -	Add key,Delete key,Check lock time,	
		ZOTYE \2008\Smart key	Program remote A,Program remote B,Program smart key A,Program smart key B,
		ZOTYE \5008\Smart key	Program remote A,Program remote B,Program smart key A,Program smart key B,

ZOTYE

ZOTYE \A1\Immobilizer\Shanghai Industrial Traffic IMMO	Clear fault code,Reset PIN code,Program key,Reset immobiliser,Delete key,Reset engine,Program engine,Immobilization,
ZOTYE\E200\Smart key	Program smart key,Delete smart key,Setup PSN,Setup VIN,Write BASE ID,Write AES SK,
ZOTYE \SR7\Smart key	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete smart key,Set VIN code,Write TBOX SK,Check key status,
ZOTYE \SR7\Remote	Remote count,Program remote,Delete remote,
ZOTYE \SR9\Smart key	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete smart key,Set VIN code,Write TBOX SK,Check key status,
ZOTYE\SR9\Remote	Remote count,Program remote,Delete remote,
ZOTYE \T200\Smart key	Program remote A,Program remote B,Program smart key A,Program smart key B,
ZOTYE\T300\Atech BCM	Remote count,Program remote,Delete remote,
ZOTYE\T300\Smart key	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete smart key,Set VIN code,Write TBOX SK,Check key status,
ZOTYE\T300\BCM	Remote count,Program remote,Delete remote,
ZOTYE\T500\Smart key	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete smart key,Set VIN code,Write TBOX SK,Check key status,
ZOTYE\T500\Remote	Remote count,Program remote,Delete remote,
ZOTYE \T600\Smart key\Naen(Magotan -type key)	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete smart key,Set VIN code,Write TBOX SK,Check key status,
ZOTYE \T600\Smart key\Huofu(Hyundai -type key)	Program new key,Program old key,Program PEPS,Program IMMO,Program ESCL,Write PIN code,
ZOTYE \T600\Remote	Remote count,Program remote,Delete remote,
ZOTYE \T600\Immobilizer	Program key,Delete key,Immobilization,Program engine ECU,Reset engine ECU,Reset immobilizer,Lock immobilizer,Check key,Check engine,
ZOTYE\T700\BCM	Program whole system,Replace BCM,Replace engine EMS,Replace ESCL,Check key,Delete key,Add key,Re-program all keys,Write VIN code,Reset engine EMS,Clear fault code,Write certified SK to T-BOX,
ZOTYE \Z100\Remote	Delete remote,Program remote,
ZOTYE \Z100\Immobilizer\Shanghai Industrial Traffic IMMO	Clear fault code,Reset PIN code,Program key,Reset immobiliser,Delete key,Reset engine,Program engine,Immobilization,
ZOTYE \Z200\Smart key	Program remote A,Program remote B,Program smart key A,Program smart key B,
ZOTYE\Z300\Smart key	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete smart key,Set VIN code,Write TBOX SK,Check key status,
ZOTYE \Z300\Remote\Type 1	Program remote,Delete remote,
ZOTYE \Z300\Remote\Type 2	Remote count,Program remote,Delete remote,
ZOTYE \Z300\Immobilizer\Shanghai Industrial Traffic IMMO	Clear fault code,Reset PIN code,Program key,Reset immobiliser,Delete key,Reset engine,Program engine,Immobilization,
ZOTYE \Z300\Immobilizer\Lianchuang IMMO	Clear fault code,Read key count,Add key,Delete key,Detect key,Reset immo box,Immobilization,Program whole system,Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program
ZOTYE\Z360\Smart key	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete smart key,Set VIN code,Write TBOX SK,Check key status,
ZOTYE\Z360\Remote\Type 1	Program remote,Delete remote,
ZOTYE\Z360\Remote\Type 2	Remote count,Program remote,Delete remote,
ZOTYE\Z360\IMMO\Shanghai Industrial Traffic IMMO	Clear fault code,Reset PIN code,Program key,Reset immobiliser,Delete key,Reset engine,Program engine,Immobilization,
ZOTYE\Z360\IMMO\Lianchuang IMMO	Clear fault code,Read key count,Add key,Delete key,Detect key,Reset immo box,Immobilization,Program whole system,Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program
ZOTYE \Z500\Smart key	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete smart key,Set VIN code,Write TBOX SK,Check key status,
ZOTYE \Z500\Remote	Remote count,Program remote,Delete remote,
ZOTYE\Z560\Smart key	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete smart key,Set VIN code,Write TBOX SK,Check key status,
ZOTYE\Z560\Remote	Remote count,Program remote,Delete remote,
ZOTYE \Z700\Smart key	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete smart key,Set VIN code,Write TBOX SK,Check key status,
ZOTYE \Z700\Remote	Remote count,Program remote,Delete remote,
ZOTYE \Domy X5\Smart key	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete smart key,Set VIN code,Write TBOX SK,Check key status,
ZOTYE \Domy X5\Remote	Remote count,Program remote,Delete remote,

	ZOTYEX7\Smart key	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete smart key,Set VIN code,Write TBOX SK,Check key status,
	ZOTYEX7\Remote	Remote count,Program remote,Delete remote,
	ZOTYE \Langjun\Remote	Delete remote,Program remote,
	ZOTYE \Langjun\Immobilizer\Shanghai Industrial Traffic IMMO	Clear fault code,Reset PIN code,Program key,Reset immobiliser,Delete key,Reset engine,Program engine,Immobilization,
	ZOTYE \Langyue\Remote	Delete remote,Program remote,
	ZOTYE \Langyue\Immobilizer\Shanghai Industrial Traffic IMMO	Clear fault code,Reset PIN code,Program key,Reset immobiliser,Delete key,Reset engine,Program engine,Immobilization,
	ZOTYEE30\Remote	Remote count,Program remote,Delete remote,
	ZOTYE \Langlang\Smart key	Program remote A,Program remote B,Program smart key A,Program smart key B,
FAW RED FLAG	FAW RED FLAG\Select from type\Smart key\System 1	Smart key registration,Program remote,Reset immobiliser,
	FAW RED FLAG\Select from type\Smart key\System 2	Delete smart key,Add smart key,
	FAW red flag\Select from type\IMMO system\VW IMMO	Program key,
	FAW RED FLAG\Select from vehicle\H7\System 2	Delete smart key,Add smart key,
	FAW RED FLAG\Select from vehicle\HQ300\System 1	Smart key registration,Program remote,Reset immobiliser,
	FAW red flag\Select from vehicle\Ming Shi\VW IMMO	Program key,
JMC	JMC\S330	Add key,Delete key,
	JMC\S350	Add key,Delete key,
ZHENGZHOU MAZDA	ZHENGZHOU MAZDA\IMMO\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Delete key,Immobilization,Reset immo box,Detect key,
WULING MOTORS	WULING MOTORS\Enjoy S1	Check key count,Program key,Delete key,Reset engine ECM,Module programming,
	WULING MOTORS\Enjoy S3	Check key count,Program key,Delete key,Reset engine ECM,Module programming,
SOUEAST MOTORS	SOUEAST MOTORS\DX3\Smart key	Read pin code,Program key,
	SOUEAST MOTORS\DX3\Mechanical key\Remote(CAN)	Program remote,
	SOUEAST MOTORS\DX3\Mechanical key\IMMO(CAN)	Program key,Read PIN code,
	SOUEAST MOTORS\DX7\Smart key	Program key,Read pin code,
	SOUEAST MOTORS\V3\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
	SOUEAST MOTORS\GALANT\Mitsubishi -IMMO	Clear fault code,Read key count,Program key,Reset immo ECU,
	SOUEAST MOTORS\V6\Smart key	All key lost,Learning status,Clear PEPS,Clear EMS,Delete ESCL(electronic steering column lock),Read PIN code,Remote programming method,
	SOUEAST MOTORS\SOVERAN\Mitsubishi -IMMO	Clear fault code,Read key count,Program key,Reset immo ECU,
TIANJIN FAW	TIANJIN FAW\Smart key	Program ESCL,Program PEPS,Delete smart key,Read key count,Program smart key,
	TIANJIN FAW\Remote	Program remote,Read remote count,Delete remote,
	TIANJIN FAW\IMMO\I5	Add key,
	TIANJIN FAW\IMMO\I7	Add key,
	TIANJIN FAW\IMMO\Vela(MT34 Delphi) key \Sync engine and immo(CAN)	Sync engine and IMMO (CAN),
	TIANJIN FAW\IMMO\Vela(MT34 Delphi) key \Reset immo box(4C chip)	Reset immobox(4C chip),
	TIANJIN FAW\IMMO\Vizhi(MT34 Delphi) key	Reset immobox(4C chip),
	TIANJIN FAW\IMMO\Vizhi V2\Sync engine and immo(CAN)	Sync engine and IMMO (CAN),
	TIANJIN FAW\IMMO\Vizhi V5\ECU IMMO initialization	Type 1,Type 2,Type 3,
	TIANJIN FAW\IMMO\Vizhi V5\Replace reader coil and program key	Replace immobilizer coil to program key,
	TIANJIN FAW\IMMO\Vizhi V5\IMMO	Add key,

	TIANJIN FAW\IMMO\N5(new)	Add key,
	TIANJIN FAW\IMMO\Xenia S80	Add key,
	TIANJIN FAW\IMMO\A70	All key lost,
	TIANJIN FAW\IMMO\D60	Add key,
FAW JIABAO	FAW JIABAO\V80\V80L\T80\Integrated IMMO	Program engine ECU,Program key,Delete key,Immo ECU reset,
DONGFENG G FENGSHEN	DONGFENG FENGSHEN\A30\BCM	Replace OBC & program remote,Program remote,
	DONGFENG FENGSHEN\A30\IMMO	Key programming status,Fault pieces re-programming,Replace immo host & EMS,Replace EMS,Replace immo controller,Program key,
	DONGFENG FENGSHEN\A60\A60 -A14T\BCM	Program key,
	DONGFENG FENGSHEN\A60\A60 -A16\Smart key	Program key,
	DONGFENG FENGSHEN\A60\A60 -A16\BCM	Program key,
	DONGFENG FENGSHEN\A60\A60 -HR16,MR20\Smart key\Type 1	Program smart key,
	DONGFENG FENGSHEN\A60\A60 -HR16,MR20\Smart key\Type 2	Program smart key,
	DONGFENG FENGSHEN\A60\A60 -HR16,MR20\BCM	Activate steering wheel lock,
	DONGFENG FENGSHEN\A60\A60 -HR16,MR20\IMMO\Type 1	Add key,Activate steering wheel lock(all key lost),
	DONGFENG FENGSHEN\A60\A60 -HR16,MR20\IMMO\Type 2	Add key,Activate steering wheel lock(all key lost),
	DONGFENG FENGSHEN\AX3\AX3(DFM A14T MT62.1)\[button start]\Smart key	Program key,
	DONGFENG FENGSHEN\AX3\AX3(DFM A14T MT62.1)\[key start]\BCM	Program remote,
	DONGFENG FENGSHEN\AX3\AX3(DFM A14T MT62.1)\[key start]\IMMO	Key programming status,Fault pieces re-programming,Replace immo host & EMS,Replace EMS,Replace immo controller,Program key,
	DONGFENG FENGSHEN\AX3\AX3(DFM A15 MT22.1)\[key start]\BCM	Program remote,
	DONGFENG FENGSHEN\AX3\AX3(DFM A15 MT22.1)\[key start]\IMMO	Key programming status,Fault pieces re-programming,Replace immo host & EMS,Replace EMS,Replace immo controller,Program key,
	DONGFENG FENGSHEN\AX4\Smart key	Program key,
	DONGFENG FENGSHEN\AX7\BCM	Program key,
	DONGFENG FENGSHEN\H30 Cross\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Check engine ECU,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Delete key,Immobilization,Reset immo box,Detect key,
	DONGFENG FENGSHEN\H30 Cross\IMMO	Key programming status,Fault pieces re-programming,Replace immo host & EMS,Replace EMS,Replace immo controller,Program key,
	DONGFENG FENGSHEN\H30\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Check engine ECU,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Delete key,Immobilization,Reset immo box,Detect key,
	DONGFENG FENGSHEN\H30\IMMO	Key programming status,Fault pieces re-programming,Replace immo host & EMS,Replace EMS,Replace immo controller,Program key,
	DONGFENG FENGSHEN\L60\IMMO	Program key,
DONGFENG FENGSHEN\MX5\BCM	Program key,	
DONGFENG FENGSHEN\S30\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Check engine ECU,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Delete key,Immobilization,Reset immo box,Detect key,	
DONGFENG FENGSHEN\S30\IMMO	Key programming status,Fault pieces re-programming,Replace immo host & EMS,Replace EMS,Replace immo controller,Program key,	
	DONGFENG FENGXING\F600\L series\BCM IMMO	Key count,Program key,Delete key,Program whole system,Replace BCM,Program engine ECU,
	DONGFENG FENGXING\F600\L series\PEPS	Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO) program info.,ECU immobilization,
	DONGFENG FENGXING\F600\L series\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Clear key,Immobilization,Reset immo box,Detect key,
	DONGFENG FENGXING\F600\L series\UAES BCM	Delete remote,Program remote,
	DONGFENG FENGXING\Joyear\B111.8T Lianchuang IMMO(K4)	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Delete key,Immobilization,Reset immobiliser,Detect key,
	DONGFENG FENGXING\Joyear\B11\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Clear key,Immobilization,Reset immo box,Detect key,
	DONGFENG FENGXING\Joyear\B11\PIN code	DIAS/UMC - PIN code reading,
DONGFENG FENGXING\Joyear\B121.8T Lianchuang IMMO(K4)	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Delete key,Immobilization,Reset immobiliser,Detect key,	

	DONGFENG FENGXING\Fengxing series\CM7\BCM IMMO	Key count,Program key,Delete key,Program whole system,Replace BCM,Program engine ECU,
	DONGFENG FENGXING\Fengxing series\CM7\PEPS	Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO) program info.,ECU immobilization,
	DONGFENG FENGXING\Fengxing series\CM7\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Clear key,Immobilization,Reset immo box,Detect key,
	DONGFENG FENGXING\Fengxing series\CM7\UAES BCM	Delete remote,Program remote,
	DONGFENG FENGXING\Fengxing series\S500\BCM IMMO	Key count,Program key,Delete key,Program whole system,Replace BCM,Program engine ECU,
	DONGFENG FENGXING\Fengxing series\S500\PEPS	Program whole system,Program engine ECU,Program key,Clear key,Program ESCL,Reset EMS,Key count,Read PEPS(IMMO) program info.,ECU immobilization,
	DONGFENG FENGXING\Fengxing series\S500\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Clear key,Immobilization,Reset immo box,Detect key,
	DONGFENG FENGXING\Fengxing series\S500\UAES BCM	Delete remote,Program remote,
LEOPAARD	LEOPAARD\CS10\Nam smart key	Add smart key,Delete smart key,Smart key count,
	LEOPAARD\CS10\Integrated IMMO(CAN)	Program key,Program immobiliser or EMS,
	LEOPAARD\CS4\IMMO\Integrated IMMO	PIN code setup,After-sales immobiliser replacement,After sale EMS replacement,After sale key replacement,Offline immobilization,Program IMMO and EMS,Program new key,Program old key,Delete all keys,Program VIN code,Program
	LEOPAARD\CS6\IMMO\Diesel\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
	LEOPAARD\CS6\IMMO\Petrol\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
	LEOPAARD\CS7\BCM\BCM	Program remote,Delete remote,Read remote count,
	LEOPAARD\CS7\IMMO\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset engine ECU,Reset immo box,
	LEOPAARD\CS7\IMMO\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Delete key,Immobilization,Reset immobox,Detect key,
	LEOPAARD\CS7\IMMO\Integrated IMMO	PIN code setup,After-sales immobiliser replacement,After sale EMS replacement,After sale key replacement,Offline immobilization,Program IMMO and EMS,Program new key,Program old key,Delete all keys,Program VIN code,Program
	LEOPAARD\CS9\Nam smart key	Add smart key,Delete smart key,Smart key count,
LANDWIND	LANDWIND\X2\Smart key	Program smart key,Program EMS (UMC),Program EMS (Delphello),Program smart immo box,
	LANDWIND\X5\TungThih smart key	Clear fault code,Program EMS,Reset EMS,Program ESCL,Program old PEPS,Program new PEPS,Program key,
	LANDWIND\X5\WS smart key	Program ESCL,Program old PEPS,Program key,Clear fault code,Program new PEPS,Reset to factory mode,
	LANDWIND\X5\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Reset engine ECU,Reset immobox,
	LANDWIND\X6\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
	LANDWIND\X7\2016\TungThih smart key	Clear fault code,Program EMS,Reset EMS,Program ESCL,Program old PEPS,Program new PEPS,Program key,
	LANDWIND\X7\2017\TungThih smart key	Program key,
	LANDWIND\X8\2016\Delphi PIN code	Delphi anti-theft PIN code reading,
	LANDWIND\X8\2016\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Reset engine ECU,Reset immobox,
	LANDWIND\X8\2016\Siemens PIN code	Read Siemens PIN code,
	LANDWIND\X8\2016\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
	LANDWIND\X8\2017\TungThih smart key	Program key,
	LANDWIND\X9\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Reset engine ECU,Reset immobox,
	LANDWIND\X9\Siemens PIN code	Read Siemens PIN code,
	LANDWIND\X9\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
	LANDWIND\Funwa\Siemens PIN code	Read Siemens PIN code,
	LANDWIND\Funwa\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
	LANDWIND\Fashion\Siemens PIN code	Read Siemens PIN code,
	LANDWIND\Fashion\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
	CHANGAN AUTO\B301\Atech BCM	Read remote count,Program remote,Delete remote,

**CHANGAN
AUTO**

CHANGAN AUTO\IC207\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\IC207\Remote	Read remote count,Program remote,Clear fault code>Delete remote,
CHANGAN AUTO\IC207\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\ICM8\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser>Delete key,Program key,Reset PIN code,Clear fault code,
CHANGAN AUTO\ICS15\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\ICS15\Remote	Read remote count,Program remote,Clear fault code>Delete remote,
CHANGAN AUTO\ICS15\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\ICS35\Delphi BCM\2014-2015	Program key,Program remote>Delete key>Delete remote,
CHANGAN AUTO\ICS35\Delphi BCM\ -2014	Program key>Delete key,Program remote>Delete remote,
CHANGAN AUTO\ICS35\Delphi BCM\2016-	Program key,Program remote>Delete key>Delete remote,
CHANGAN AUTO\ICS35\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\ICS55\Smart key	Read key count,Smart key>Delete smart key,
CHANGAN AUTO\ICS55\BCM	Read remote count,Program remote,Clear fault code,
CHANGAN AUTO\ICS75\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\ICS75\Remote	Read remote count,Program remote,Clear fault code>Delete remote,
CHANGAN AUTO\ICS75\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\ICS95\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\ICS95\Remote	Read remote count,Program remote,Clear fault code>Delete remote,
CHANGAN AUTO\ICS95\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\ICV7\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser>Delete key,Program key,Reset PIN code,Clear fault code,
CHANGAN AUTO\ICV9\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser>Delete key,Program key,Reset PIN code,Clear fault code,
CHANGAN AUTO\ICX20\Atech BCM	Read remote count,Program remote>Delete remote,
CHANGAN AUTO\ICX20\Integrated BCM(B501)	Read remote count,Program remote>Delete remote,
CHANGAN AUTO\ICX30\Atech BCM	Read remote count,Program remote>Delete remote,
CHANGAN AUTO\ICX30\Delphi IMMO	Clear fault code,Reset PIN code,Program key>Delete key,ECU immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Read key count,
CHANGAN AUTO\ICX30\Integrated BCM(B501)	Read remote count,Program remote>Delete remote,
CHANGAN AUTO\ICX70\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\ICX70\Remote	Read remote count,Program remote,
CHANGAN AUTO\IV301\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\IV301\Remote	Read remote count,Program remote,Clear fault code>Delete remote,
CHANGAN AUTO\IV301\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
CHANGAN AUTO\Linmax\Smart key	Read key count,Program smart key,Clear fault code,
CHANGAN AUTO\Linmax\Integrated BCM	Read remote count,Program remote,Clear fault code,
CHANGAN AUTO\Benni\Chongqing integrated IMMO	Clear fault code,Reset PIN code,Program key>Delete key,Reset immobiliser,Reset engine,Program engine,Immobilization,
CHANGAN AUTO\Benni\Integrated BCM(A301)	Read remote count,Program remote>Delete remote,
CHANGAN AUTO\Benni Mini\Remote	Read remote count,Program remote,
CHANGAN AUTO\Zun Xing\Lianchuang IMMO	Clear fault code,Add key>Delete key,Detect key,Reset immobiliser,Immobilization,Reset engine ECU,Program engine ECU,Engine ECU detection,Write immo VIN code,Write engine VIN code,Write VIN code,Read key count,Program whole system,
CHANGAN AUTO\Zhi Xiang\Atech BCM	Read remote count,Program remote>Delete remote,

	CHANGAN AUTO\Zhi Xiang\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Read key count,
	CHANGAN AUTO\Alsvin\V3/V5\Atech BCM	Read remote count,Program remote,Delete remote,
	CHANGAN AUTO\Alsvin\V3/V5\Integrated BCM(B501)\Type 1	Read remote count,Program remote,Delete remote,
	CHANGAN AUTO\Alsvin\V3/V5\Integrated BCM(B501)\Type 2	Read remote count,Program remote,
	CHANGAN AUTO\Alsvin\V7\Smart key	Read key count,Program smart key,Clear fault code,
	CHANGAN AUTO\Alsvin\V7\Remote	Read remote count,Program remote,Clear fault code,Delete remote,
	CHANGAN AUTO\Alsvin\V7\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
	CHANGAN AUTO\New Benni EV\Integrated BCM	Read remote count,Program remote,Delete remote,
	CHANGAN AUTO\New Benni\Remote	Read remote count,Program remote,
	CHANGAN AUTO\Jiexun\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
	CHANGAN AUTO\Oulove\Remote	Read remote count,Program remote,Delete remote,
	CHANGAN AUTO\Auchan\Smart key	Read key count,Program smart key,Clear fault code,
	CHANGAN AUTO\Auchan\Remote	Delete remote,Program remote,OBC locked,Unlocking OBC,
	CHANGAN AUTO\Honor\Atech BCM	Read remote count,Program remote,Delete remote,
	CHANGAN AUTO\Honor\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset engine ECU,Reset immobiliser,Read key count,
	CHANGAN AUTO\Raeton\Smart key	Read key count,Program smart key,Clear fault code,
	CHANGAN AUTO\Raeton\Remote	Read remote count,Program remote,Clear fault code,Delete remote,
	CHANGAN AUTO\Raeton\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
	CHANGAN AUTO\Eado XT\Remote	Read remote count,Program remote,Clear fault code,Delete remote,
	CHANGAN AUTO\Eado XT\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
	CHANGAN AUTO\Eado\Remote	Read remote count,Program remote,Clear fault code,Delete remote,
	CHANGAN AUTO\Eado EV\Smart key	Read key count,Program smart key,Clear fault code,
	CHANGAN AUTO\Eado EV\Remote	Read remote count,Program remote,Clear fault code,Delete remote,
	CHANGAN AUTO\Eado EV\Integrated BCM(C201)	Delete remote,Program remote,Read remote count,
	CHANGAN AUTO\Eado\Smart key	Read key count,Program smart key,Clear fault code,
	CHANGAN AUTO\Eado\Remote	Read remote count,Program remote,Clear fault code,Delete remote,
	CHANGAN AUTO\Eado\Integrated BCM(C201)	Read remote count,Program remote,Delete remote,Read remote PIN code,
	CHANGAN AUTO\Raimondi\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
SAIC MAXUS	SAIC MAXUS\A80\BCM	Add key,Delete remote,Add remote,Delete key,
	SAIC MAXUS\EV80\BCM	Add key,Delete remote,Add remote,Delete key,
	SAIC MAXUS\G10\Smart key	Add smart key,Delete smart key,
	SAIC MAXUS\G10\BCM	Delete remote,Add remote,Delete key,Add key,
	SAIC MAXUS\V80\BCM	Add key,Delete remote,Add remote,Delete key,
	HAIMA\Smart key\M3\Huf smart key	Program old key,Program new key,Program IMMO,Clear ESCL immo spot,Program start controller,Program ESCL,
	HAIMA\Smart key\M5\Huf smart key	Program old key,Program new key,Program IMMO,Clear ESCL immo spot,Program start controller,Program ESCL,
	HAIMA\Smart key\M6\Huf smart key	Program old key,Program new key,Program IMMO,Clear ESCL immo spot,Program start controller,Program ESCL,
	HAIMA\Smart key\M8\Huf smart key	Program old key,Program new key,Program IMMO,Clear ESCL immo spot,Program start controller,Program ESCL,
	HAIMA\Smart key\S5\Fuxin der smart key	Reset PEPS,Program PEPS & IMMO,Program PEPS & ESCL,Program PEPS,Program key,

HAIMA	HAIMA\Smart key\S5\Huf smart key	Program old key,Program new key,Program IMMO,Clear ESCL immo spot,Program start controller,Program ESCL.
	HAIMA\Smart key\S7\Huf smart key	Program old key,Program new key,Program IMMO,Clear ESCL immo spot,Program start controller,Program ESCL.
	HAIMA\Smart key\V70\Huf smart key	Program old key,Program new key,Program IMMO,Clear ESCL immo spot,Program start controller,Program ESCL.
	HAIMA\Remote\M3\TungThih BCM	Program remote,
	HAIMA\Remote\M3\Kingdom auto BCM	Program remote,
	HAIMA\Remote\M5\Steel Mate body controller	Program remote,
	HAIMA\Remote\M6\Kingdom auto BCM	Program remote,
	HAIMA\Remote\S5\Kingdom auto BCM	Program remote,
	HAIMA\Remote\V70\Steel Mate body controller	Program remote,
	HAIMA\PIN code	Industrial traffic PIN code reading,
	HAIMA\IMMO\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
	HAIMA\IMMO\Lianchuang IMMO(S7)	Add key,Delete key,New system programming,Immo ECU programming,Reading the amount of keys,Engine ECU programming,Immo ECU reset,Engine ECU reset,Read VIN code,Key detection,Engine ECU detection,Program engine
	HAIMA\IMMO\Lianchuang IMMO(old)	Write immo VIN code,Write engine VIN code,Check engine ECU,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Delete key,Immobilization,Reset immo box,Detect key,
	HAIMA\IMMO\UMC IMMO(M3)	Replace immo ECU,Program engine,Detect key,Reset engine ECU,Delete key,Add old key,Add new key,Read key count,Clear fault code,
	HAIMA\IMMO\UMC IMMO(M5/M7/S7)	Replace immo ECU,Program engine,Detect key,Reset engine ECU,Delete key,Add old key,Add new key,Read key count,Clear fault code,
	HAIMA\IMMO\UMC IMMO(M8/V70)	Clear fault code,Replace immo ECU,Replace engine ECU,Reset engine ECU,Read key status,Add old key,Add new key,Delete key,
HAIMA\IMMO\IMMO controller(M6/S5)	Reset ECM,Adjust ECMPIN,Key testing,Lock ECU,Adjust ECMSK2,Make SK2,Write PIN code,Write VIN code,Reset ECU hardware,Delete key,Program old key,Program new key,	
CHANGHE SUZUKI	CHANGHE SUZUKI\Liana\TungThih IMMO	Reset engine ECU,Key detecting,Reset immo ECU,Delete key,Add old key,Clear fault code,Program engine ECU,ECU immobilization,Add new key,Read pin code,Program VIN,Lock immobiliser,
	CHANGHE SUZUKI\Liana\Keyless access	Learn new PEPS,Learn old PEPS,Key(keyless enter) programming,Key(immobiliser)programming,Learn SLU (steering solenoid valve),Reset EMS(Engine computer),Learn EMS(Engine computer),
	CHANGHE SUZUKI\Liana\IMMO 1	Program key,Delete key,Register immobiliser,
	CHANGHE SUZUKI\Wagon R\IMMO\TungThih IMMO	Reset engine ECU,Key detecting,Reset immo ECU,Delete key,Add old key,Clear fault code,Program engine ECU,ECU immobilization,Add new key,Read pin code,Program VIN,Lock immobiliser,
	CHANGHE SUZUKI\Splash\IMMO\TungThih IMMO	Reset engine ECU,Key detecting,Reset immo ECU,Delete key,Add old key,Clear fault code,Program engine ECU,ECU immobilization,Add new key,Read pin code,Program VIN,Lock immobiliser,
	CHANGHE SUZUKI\Splash\IMMO\TungThih IMMO	Program engine ECU,ECU immobilization,Program key,Reset EMS,
ZHENGZHOU NISSAN	ZHENGZHOU NISSAN\Smart key\NV200\Smart eky(4C)	Program smart key,Delete smart key,Program steering lock,
	ZHENGZHOU NISSAN\Smart key\Dongfeng MX5\Smart key	Add smart key,
	ZHENGZHOU NISSAN\Smart key\Dongfeng MX6\Smart eky(4C)	Program smart key,Delete smart key,Program steering lock,
	ZHENGZHOU NISSAN\Release directional lock	Release steering lock,
	ZHENGZHOU NISSAN\Read PIN code\Succe 1.6/2.0\Lianchuang IMMO(read PIN)	Read PIN code,
	ZHENGZHOU NISSAN\IMMO\NV200\Type 1	Add key,Activate steering wheel lock,
	ZHENGZHOU NISSAN\IMMO\NV200\Type 2	Add key,Activate steering wheel lock,
	ZHENGZHOU NISSAN\IMMO\Dongfeng MX6	Add key,Activate steering wheel lock,
	ZHENGZHOU NISSAN\IMMO\Odin diesel\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,Read pin code,
	ZHENGZHOU NISSAN\IMMO\Succe 1.5\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,Read pin code,
	ZHENGZHOU NISSAN\IMMO\Succe 1.6/2.0\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Add key,Delete key,Detect key,Clear fault code,Read PIN code,Read pin code,
ZHENGZHOU NISSAN\IMMO\Reach\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,Read pin code,	
HAFEI	HAFEI\Hafei 8\Mitsubishi IMMO	Add key,
	HAFEI\Saibao\Remote	Program remote,
	HAFEI\Simbo\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key,Delete key,Immobilization,Reset immobiliser,Detect key,

	HAFEI\Simbol\Remote	Program remote,
	HAFEI\Lobo\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine ECU detection,Read VIN code,Reset engine ECU,Program engine ECU,Program whole system,Read key count,Clear fault code,Add key>Delete key,Immobilization,Reset immobiliser,Detect key,
HUWTAI	HUWTAI>Select from type\Remote\10 PIN	Program remote,
	HUWTAI>Select from type\Remote\16 PIN\Type 1(K)	Program remote,
	HUWTAI>Select from type\Remote\16 PIN\Type 2	Program remote,
	HUWTAI>Select from type\IMMO\IMMO 1	Add key>Delete key,Detect key,Write VIN code,Read PIN code,
	HUWTAI>Select from type\IMMO\IMMO 2	Program key,Read key count,ECM neutral mode,
	HUWTAI>Select from type\IMMO\IMMO 3	Program key,Read key count,ECM neutral mode,
	HUWTAI>Select from type\IMMO\IMMO 4	ECM neutral mode,Read key count,Program key,
	HUWTAI>Select from vehicle\B11\Remote	Program remote,
	HUWTAI>Select from vehicle\B21(E70)\Remote	Program remote,
	HUWTAI>Select from vehicle\B35(boliger)\Remote	Program remote,
	HUWTAI>Select from vehicle\Sisha Fe(domestic)\Remote	Program remote,
	HUWTAI>Select from vehicle\Sisha Fe(domestic)\IMMO 1	Add key>Delete key,Detect key,Write VIN code,Read PIN code,
	HUWTAI>Select from vehicle\Sisha Fe(domestic)\IMMO 2	Program key,Read key count,ECM neutral mode,
	HUWTAI>Select from vehicle\Sisha Fe(imported)\Remote	Program remote,
	HUWTAI>Select from vehicle\Sisha Fe(imported)\IMMO 1	Add key>Delete key,Detect key,Write VIN code,Read PIN code,
	HUWTAI>Select from vehicle\Sisha Fe(imported)\IMMO 2	Program key,Read key count,ECM neutral mode,
	HUWTAI>Select from vehicle\Sisha Fe(imported)\IMMO 3	Program key,Read key count,ECM neutral mode,
	HUWTAI>Select from vehicle\Sisha Fe(imported)\IMMO 4	ECM neutral mode,Read key count,Program key,
	HUWTAI>Select from vehicle\Terracan\ERRACAN\Remote	Program remote,
	LIFAN	LIFAN\Minicar\Feng Shun\Siemens IMMO
LIFAN\Minicar\Feng Shun\CJAE IMMO		Clear fault code,Program engine VIN,Write key number,Reset immobiliser,Reset engine ECU,Immobilization,Program engine ECU>Delete key,Program key,Program immo VIN,
LIFAN\Minicar\Xing Shun\Siemens IMMO		Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
LIFAN\Minicar\Xing Shun\CJAE IMMO		Clear fault code,Program engine VIN,Write key number,Reset immobiliser,Reset engine ECU,Immobilization,Program engine ECU>Delete key,Program key,Program immo VIN,
LIFAN\Minicar\Fu Shun\Siemens IMMO		Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
LIFAN\Minicar\Fu Shun\CJAE IMMO		Clear fault code,Program engine VIN,Write key number,Reset immobiliser,Reset engine ECU,Immobilization,Program engine ECU>Delete key,Program key,Program immo VIN,
LIFAN\Sedan\320\CJAE IMMO(UMC)		Immobilizer,Program immo ECU,Program engine ECU,Program whole system,Reset immo ECU,Reset engine ECU,
LIFAN\Sedan\330\CJAE IMMO(UMC)		Immobilizer,Program immo ECU,Program engine ECU,Program whole system,Reset immo ECU,Reset engine ECU,
LIFAN\Sedan\520\Siemens IMMO		Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
LIFAN\Sedan\520\CJAE IMMO		Clear fault code,Program engine VIN,Write key number,Reset immobiliser,Reset engine ECU,Immobilization,Program engine ECU>Delete key,Program key,Program immo VIN,
LIFAN\Sedan\530\CJAE IMMO(UMC)		Immobilizer,Program immo ECU,Program engine ECU,Program whole system,Reset immo ECU,Reset engine ECU,
LIFAN\Sedan\620\Siemens IMMO		Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
LIFAN\Sedan\620\CJAE IMMO		Clear fault code,Program engine VIN,Write key number,Reset immobiliser,Reset engine ECU,Immobilization,Program engine ECU>Delete key,Program key,Program immo VIN,
LIFAN\Sedan\620CNG\CJAE IMMO(Delphi)		Clear fault code,Program engine VIN,Write key number,Reset immobiliser,Reset engine ECU,Immobilization,Program engine ECU>Delete key,Program key,Program immo VIN,
LIFAN\Sedan\620EV\Remote		Program remote,Program immo chip,Program immo ECU,
LIFAN\Sedan\620 (2nd gen)\Remote		Program remote,Program immo chip,Program immo ECU,
LIFAN\Sedan\630\CJAE IMMO(UMC)		Immobilizer,Program immo ECU,Program engine ECU,Program whole system,Reset immo ECU,Reset engine ECU,

	LIFAN\Sedan\720\Remote	Program remote,Delete remote,Synchronize remote,Immobilization,Delete immobilizer,Reprogram immobilizer,Program steering lock controller,
	LIFAN\Sedan\820\Remote	Program remote,Delete remote,
	LIFAN\Sedan\X50\CJAE IMMO(UMC)	Immobilizer,Program immo ECU,Program engine ECU,Program whole system,Reset immo ECU,Reset engine ECU,
	LIFAN\Sedan\X60\Siemens IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
	LIFAN\Sedan\X60\CJAE IMMO	Clear fault code,Program engine VIN,Write key number,Reset immobiliser,Reset engine ECU,Immobilization,Program engine ECU,Delete key,Program key,Program immo VIN,
	LIFAN\Sedan\X70\IMMO	Immobilizer,Program ESCL,Program engine ECU,
	LIFAN\Sedan\Lotto\CJAE IMMO(UMC)	Immobilizer,Program immo ECU,Program engine ECU,Program whole system,Reset immo ECU,Reset engine ECU,
	LIFAN\Sedan\Shiner\Remote	Program remote,Immobilization,
	LIFAN\Sedan\Shiner\IMMO	Immobilizer,Program PEPS,
	LIFAN\Sedan\Marvell\Smart key	Add smart key,Delete smart key,Program ESCL(electronic steering column lock),Delete ESCL(electronic steering column lock),
ZX AUTO	ZX AUTO\IMMO\Delphi diesel(Bosch 2.8TC) IMMO	Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN code,Program immo VIN code,Reset engine ECU,Reset immo ECU,Read engine VIN,
	ZX AUTO\IMMO\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete key,ECU immobilization,Program engine ECU,Reset engine ECU,Reset immo box,
DONGFENG FENGGUANG	DONGFENG FENGGUANG\370\Smart key	Program smart key,
	DONGFENG FENGGUANG\370\BCM	Read key count,Program key,Key clear,Program remote,
	DONGFENG FENGGUANG\580\Smart key	Program smart key,
	DONGFENG FENGGUANG\580\BCM	Read key count,Program key,Key clear,Program remote,
FOTON	FOTON\Tunland\Remote\Type 1	Read remote count,Program remote,Clear remote,
	FOTON\Tunland\Remote\Type 2	Read remote count,Program remote,Clear remote,
	FOTON\Sauvana\Remote\Type 1	Read remote count,Program remote,Clear remote,
	FOTON\Sauvana\Remote\Type 2	Read remote count,Program remote,Clear remote,
ZD	ZD\ZD2\PEPS system	Program new system,Program PEPS controller,Program key,Delete key,Read key status,Program ESCL,Program EMS,Reset EMS,Reset BCM,Write VIN code,Write PEPS PIN code,Write part no.,
	BRILLIANCE AUTO\Zhonghua\H220\Brilliance IMMO(2009-)	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine VIN,Program maintenance station ID,Programming machine main no.,Program new system,
	BRILLIANCE AUTO\Zhonghua\H230\Brilliance IMMO(2009-)	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine VIN,Program maintenance station ID,Programming machine main no.,Program new system,
	BRILLIANCE AUTO\Zhonghua\H3\PEPS smart key	Program key,Program new PEPS,Program new ESCL,Program new EMS,Program new system,Read FOB status,Reset EMS,Reset FOB,Reset PEPS,
	BRILLIANCE AUTO\Zhonghua\H3\Brilliance IMMO	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine VIN,Program maintenance station ID,Programming machine main no.,Program new system,
	BRILLIANCE AUTO\Zhonghua\H320\Brilliance IMMO(2009-)	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine VIN,Program maintenance station ID,Programming machine main no.,Program new system,
	BRILLIANCE AUTO\Zhonghua\H330\PEPS smart key	Clear fault code,Program smart key,Program new system,Reset engine ECU,Reset immo ECU,
	BRILLIANCE AUTO\Zhonghua\H330\Mitsubishi IMMO	Add key,
	BRILLIANCE AUTO\Zhonghua\H330\Brilliance IMMO(2009-)	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine VIN,Program maintenance station ID,Programming machine main no.,Program new system,
	BRILLIANCE AUTO\Zhonghua\H530\PEPS smart key	Program new system,Program smart key,Program new smart key,Program PEPS,Reset PEPS,Program ESCL,
	BRILLIANCE AUTO\Zhonghua\H530\Brilliance IMMO(2009-)	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine VIN,Program maintenance station ID,Programming machine main no.,Program new system,
	BRILLIANCE AUTO\Zhonghua\V3\PEPS smart key	Program key,Program new PEPS,Program new ESCL,Program new EMS,Program new system,Read FOB status,Reset EMS,Reset FOB,Reset PEPS,
	BRILLIANCE AUTO\Zhonghua\V3\Brilliance IMMO(2009-)	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine VIN,Program maintenance station ID,Programming machine main no.,Program new system,
	BRILLIANCE AUTO\Zhonghua\V5\PEPS smart key	Program new system,Program smart key,Program new smart key,Program PEPS,Reset PEPS,Program ESCL,
	BRILLIANCE AUTO\Zhonghua\V5\Brilliance IMMO(2009-)	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine VIN,Program maintenance station ID,Programming machine main no.,Program new system,
	BRILLIANCE AUTO\Zhonghua\Greuer \Mitsubishi IMMO	Add key,
	BRILLIANCE AUTO\Zhonghua\Greuer \Brilliance IMMO(2009-)	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine VIN,Program maintenance station ID,Programming machine main no.,Program new system,
	BRILLIANCE AUTO\Zhonghua\Greuer \Delphi IMMO	Read key count,Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Program engine VIN,Program immo VIN,Reset engine ECU,Reset immo ECU,

BRILLIANCE E AUTO	BRILLIANCE AUTO\Zhonghua\Greir \Siemens IMMO	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine VIN,Program maintenance station ID,Programming machine main no.,Program new system,
	BRILLIANCE AUTO\Zhonghua\Zhonghua(old)\Mitsubishi IMMO	Add key,
	BRILLIANCE AUTO\Zhonghua\Coupe\Mitsubishi IMMO	Add key,
	BRILLIANCE AUTO\Zhonghua\Coupe\Brilliance IMMO(2009-)	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine VIN,Program maintenance station ID,Programming machine main no.,Program new system,
	BRILLIANCE AUTO\Zhonghua\Coupe\Delphi IMMO	Read key count,Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Program engine VIN,Program immo VIN,Reset engine ECU,Reset immo ECU,
	BRILLIANCE AUTO\Zhonghua\Coupe\Siemens IMMO	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine VIN,Program maintenance station ID,Programming machine main no.,Program new system,
	BRILLIANCE AUTO\Zhonghua\Junjie\Mitsubishi IMMO	Add key,
	BRILLIANCE AUTO\Zhonghua\Junjie\Brilliance IMMO(2009-)	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine VIN,Program maintenance station ID,Programming machine main no.,Program new system,
	BRILLIANCE AUTO\Zhonghua\Junjie\Delphi IMMO	Read key count,Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Program engine VIN,Program immo VIN,Reset engine ECU,Reset immo ECU,
	BRILLIANCE AUTO\Zhonghua\Junjie\Siemens IMMO	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine VIN,Program maintenance station ID,Programming machine main no.,Program new system,
	BRILLIANCE AUTO\Zhonghua\Cross\Brilliance IMMO(2009-)	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine VIN,Program maintenance station ID,Programming machine main no.,Program new system,
	BRILLIANCE AUTO\Zhonghua\FRV\Mitsubishi IMMO	Add key,
	BRILLIANCE AUTO\Zhonghua\FRV\Brilliance IMMO(2009-)	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine VIN,Program maintenance station ID,Programming machine main no.,Program new system,
	BRILLIANCE AUTO\Zhonghua\FSV\PEPS smart key(new)	Clear fault code,Program smart key,Program new system,Reset engine ECU,Reset immo ECU,
	BRILLIANCE AUTO\Zhonghua\FSV\Mitsubishi IMMO	Add key,
	BRILLIANCE AUTO\Zhonghua\FSV\Brilliance IMMO (2009-)	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine VIN,Program maintenance station ID,Programming machine main no.,Program new system,
	BRILLIANCE AUTO\Zhonghua\Wagon\Brilliance IMMO(2009-)	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine VIN,Program maintenance station ID,Programming machine main no.,Program new system,
	BRILLIANCE AUTO\Huasong\Huasong 7\Remote	Lost all remote,Add remote,
	BRILLIANCE AUTO\Huasong\Huasong 7\IMMO	Program key,Delete & add key,Engine programming,
	BRILLIANCE AUTO\Jinbe\Brilliance IMMO(hiace H2)	Clear fault code,Program key,Reset immo ECU,Reset engine ECU,ECU immobilization,Program engine ECU,Program engine VIN,Program maintenance station ID,Programming machine main no.,Program new system,
BRILLIANCE AUTO\Jinbe\Delphi IMMO	Read key count,Clear fault code,Program key,Delete key,ECU immobilization,Program engine ECU,Program engine VIN,Program immo VIN,Reset engine ECU,Reset immo ECU,	
CHANGHE AUTO	CHANGHE AUTO\Q25\BCM	Clear fault code,Read key count,Program key,Delete key,Unlock BCM,Replace BCM,Replace EMS,Unlock EMS,
	CHANGHE AUTO\Q35\BCM	Clear fault code,Read key count,Program key,Delete key,Unlock BCM,Replace BCM,Replace EMS,Unlock EMS,
HANTENG AUTO	HANTENG AUTO\X7\Smart key	Read key learn status,Program key,Delete key,Reset EMS,Program PEPS,Program ESCL,Program EMS,
MERCURY	MERCURY \Cougar\1999-2002\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Gr.Marqui\03-04\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Gr.Marqui\2005-2010\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY \M.Taineer[PCM]\01-04\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\M.Taineer\2004-2005\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\M.Taineer\2006-2009\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\M.Taineer\2010-\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Marauder\2003-2005\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Mariner\2005-2007\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Mariner\2008-2009\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Mariner\2010-\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Milan\2006-2009\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Milan\2010-\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Montego\2005-2006\Immobilizer	Read key count,Program key,Delete all keys,

	MERCURY\Montego\2007 -Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Monterey\2004 -2005\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Monterey\2006 -2007\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Sable\2000 -2003\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Sable\2004 -2007\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Sable\2008 -\Immobilizer	Read key count,Program key,Delete all keys,
VENUCIA	VENUCIA\VENUCIA\Immobilizer\Type 1(KWP)	Add key,
	VENUCIA\VENUCIA\Remote\Type 2 (CAN)	Add key,
	VENUCIA\VENUCIA\Smart key	Program smart key,Replace engine ECU,
	VENUCIA\VENUCIA\BCM	Release steering lock,Read BCM inner code,
PROTON	PROTON>Select from type\Type 1	Add key,Reset IMMO ECU,
	PROTON>Select from type\Type 2	Program key,Delete key,
	PROTON>Select from type\Type 3	Add key,Delete key,Key count,
	PROTON>Select from type\Type 4	Add key,Delete key,Odometer adjustment,Reset engine,Program,Program immobilizer,
	PROTON>Select from type\Type 5	Program key,Program remote,
	PROTON>Select from type\Type 6	Add key,Delete key,Program remote,Key count,
	PROTON>Select from type\Type 7	Add one key,Add two keys,Program remote,Key count,
	PROTON>Select from type\Type 8	Add key,Delete key,Program remote,Key count,
	PROTON>Select from vehicle\Gen-2	Program key,Delete key,
	PROTON>Select from vehicle\Impian	Program key,Delete key,
	PROTON>Select from vehicle\Jump back\Type 1	Add key,Reset IMMO ECU,
	PROTON>Select from vehicle\Jump back\Type 2	Program key,Delete key,
	PROTON>Select from vehicle\Savvy	Add key,Reset IMMO ECU,
WEY	WEY\W5\WV5cl-2017\Keyless Entry(PEPS)	Immobilizer,Off line full system programming,Program PEPS,Program ESCL,Program engine ECU,Program T-box,
	WEY\W5 series\WV5cl-2017-\Smart key	Program key after deleting,All key lost,Add key,
	WEY\W5\WV5sl-2017\Keyless Entry(PEPS)	Immobilizer,Off line full system programming,Program PEPS,Program ESCL,Program engine ECU,Program T-box,
	WEY\W5 series\WV5sl-2017-\Smart key	Program key after deleting,All key lost,Add key,
	WEY\W7\WV7cl-2017\Kstar button-type PEPS	Program engine ECU,Program PEPS system,Program ESCL,Program smart key,All key lost,Program PEPS & EMS,T-Box after-sales strategy,
	WEY\W7 series\WV7cl-2017-\Smart key	Program key after deleting,All key lost,Add key,
	WEY\W7\WV7sl-2017\Kstar button-type PEPS	Program engine ECU,Program PEPS system,Program ESCL,Program smart key,All key lost,Program PEPS & EMS,T-Box after-sales strategy,
WEY\W7 series\WV7sl-2017-\Smart key	Program key after deleting,All key lost,Add key,	
TRAUM	TRAUM\S70\Smart key	Program full system,Program full system(w/o ESCL),Program PEPS controller,Learn ESCL,Learn EMS,Reset EMS,Smart key,Delete smart key,Set VIN code,Write TBOX SK,Check key status,
	TRAUM\S70\Remote	Remote count,Program remote,Delete remote,
DACIA	DACIA\Dokker\2012 -	Add key,
	DACIA\Duster\2010 -2011	Add key,
	DACIA\Logan\2004 -2011	Add key,
	DACIA\Sandero stepway\2006 -2011	Add key,
	DACIA\Sandero\2007 -2011	Add key,

SKODA	SKODA\IMMO 3.5\Read PIN code	Dashboard,Immobiliser,Engine,
	SKODA\IMMO 3.5\Remote	Add remote,Delete remote,
	SKODA\IMMO 3.5\Immobilizer	Immobiliser,Dashboard,
	SKODA\IMMO2 & IMMO3\Read PIN code	Dashboard,Immo box,Engine,Dashboard(CANBUS),Touareg 3.0 Diesel,
	SKODA\IMMO2 & IMMO3\Immobilizer	Immob box,Dashboard,Dashboard(CAN),Immobilizer(CAN),10 Jetta,
	SKODA\IMMO 5\Smart key	Backup immo data,Make dealer key,Learn key,Clear airbag fault code,
	SKODA\IMMO 4\NEC+24C64 (2012)\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key,Delete key,Learn key,Unlock key,Clear airbag fault code,
	SKODA\IMMO 4\NEC 24C64 (2013)\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key,Delete key,Learn key,Unlock key,Clear airbag fault code,
	SKODA\IMMO 4\NEC+24C64 (2013)\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Delete key,Directly add key,Learn key,Unlock key,Clear airbag fault code,
	SKODA\IMMO 4\9S12XHZ512\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key,Delete key,Learn key,Unlock key,Clear airbag fault code,
	SKODA\IMMO 4\1CDC+24C32\Immobilizer	Read immo data,Make dealer key,Directly add key,Delete key,Learn key,Backup EEPROM,Recover EEPROM,Unlock key,Clear airbag fault code,
	SKODA\IMMO 4\IMQB-35XX (Mainland/VDO)\Immobilizer	Backup EEPROM,Recover EEPROM,Backup immo data,Recover immo data,Make dealer key,Program key(OBD),Add key,Delete key,Recover dashboard,
	SKODA\IMMO 4\INEC 24C32\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key,Delete key,Learn key,Unlock key,Clear airbag fault code,
	SKODA\IMMO 4\INEC 24C64\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key,Delete key,Learn key,Unlock key,Clear airbag fault code,
	SKODA\IMMO 4\INEC 95320\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key,Delete key,Learn key,Unlock key,Clear airbag fault code,
	SKODA\IMMO 4\INEC24C64 (2014-)\Immobilizer	Make dealer key,Learn key(OBD),Backup EPROM,Recover EPROM,Delete key,Directly add key,Reset dashboard,Odometer adjustment,Unlock key,Backup immo data,
	SKODA\IMMO 4\INEC35XX\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo data,Make dealer key,Directly add key,Delete key,Learn key,Unlock key,
	SKODA\IMMO 4\INEC95320 (Bora Jetta)\Immobilizer	Backup EPROM,Reset EPROM,Backup immo data,Restore immo data,Make dealer key,Make OEM key,Key learn(OBD),Directly add key,Reset odometer,Odometer adjustment,Delete key,Unlock key,
	SKODA\IMMO 4\Identify IMMO type\IMMO 4	Identify immo4 type,
	SKODA\IMMO 4\Magotan/CC\Immobilizer	Make dealer key,Learn key,
SKODA\Remote\Polo (2015)\Remote	Program remote,	
SKODA\Remote\Central module (1281)	Add remote,Delete remote,	
SKODA\Remote\Central door lock (1281)	Add remote,Delete remote,	
SKODA\Remote\Remote	Add remote,Delete remote,	
BESTURN	BESTURN\Smart key\B70	Program key,Program PEPS,
	BESTURN\Smart key\B90	Program key,Program PEPS,
	BESTURN\Smart key\X80	Program key,Program PEPS,
	BESTURN\Remote\B90	Program remote,
	BESTURN\Remote\X80	Program remote,
	BESTURN\Remote\New B70	Program remote,
	BESTURN\Remote\Oley	Automatic,Manual,
	BESTURN\IMMO\B30	All key lost,
	BESTURN\IMMO\B70(2013)	Key clear,Clear fault code,Program key,
	BESTURN\IMMO\B90(2013)	Key clear,Clear fault code,Program key,
	BESTURN\IMMO\X80(2013)	Key clear,Clear fault code,Program key,
	BESTURN\IMMO\New besturn(B50)- 2015	Key clear,Clear fault code,Program key,
	BESTURN\IMMO\New besturn(B50)2015 -	Add key,
	BESTURN\IMMO\New besturn(B70)	Key clear,Clear fault code,Program key,

	BESTURNIMMO\Oley	Key clear,Clear fault code,Program key,
	BESTURNIMMO\Old besturn(CAN)	Read key count,Add key,All key lost,
ROLLS-ROYCE	ROLLS-ROYCE\Select from vehicle\Phantom	Program key,Disable and enable,Make key with EPROM data,Backup & recover,Sync DME,Sync ELV,Clear fault code,Clear SHADOW,
SSANG YONG	SSANG YONG\Select from type\Remote\Type 2	Program remote,
	SSANG YONG\Select from type\Immobilizer\Type 3	Program key,
	SSANG YONG\Select from vehicle\Chairman\XDi system	Program key,Delete key,
	SSANG YONG\Select from vehicle\Chairman\Diesel	Program key,
	SSANG YONG\Select from vehicle\Chairman\Petrol	Program key,
	SSANG YONG\Select from vehicle\Korando\XDi system	Program key,Delete key,
	SSANG YONG\Select from vehicle\Korando\Diesel	Program key,
	SSANG YONG\Select from vehicle\Korando\Petrol	Program key,
	SSANG YONG\Select from vehicle\Kyron\XDi system	Program key,Delete key,
	SSANG YONG\Select from vehicle\Kyron\Diesel	Program key,
	SSANG YONG\Select from vehicle\Kyron\Petrol	Program key,
	SSANG YONG\Select from vehicle\Musso\XDi system	Program key,Delete key,
	SSANG YONG\Select from vehicle\Musso\Diesel	Program key,
	SSANG YONG\Select from vehicle\Musso\Petrol	Program key,
	SSANG YONG\Select from vehicle\Rexton\XDi system	Program key,Delete key,
	SSANG YONG\Select from vehicle\Rexton\Diesel	Program key,
	SSANG YONG\Select from vehicle\Rexton\Petrol	Program key,
	SSANG YONG\Select from vehicle\Stavic Rodus\XDi system	Program key,Delete key,
	SSANG YONG\Select from vehicle\Stavic Rodus\Diesel	Program key,
	SSANG YONG\Select from vehicle\Stavic Rodus\Petrol	Program key,
	SSANG YONG\Select from vehicle\Actyon\XDi system	Program key,Delete key,
	SSANG YONG\Select from vehicle\Actyon\Diesel	Program key,
	SSANG YONG\Select from vehicle\Actyon\Petrol	Program key,
	SSANG YONG\Select from vehicle\Rodius\XDi system	Program key,Delete key,
	SSANG YONG\Select from vehicle\Rodius\Diesel	Program key,
	SSANG YONG\Select from vehicle\Rodius\Petrol	Program key,
	SSANG YONG\Select from vehicle\Rexton2\XDi system	Program key,Delete key,
	SSANG YONG\Select from vehicle\Rexton2\Diesel	Program key,
	SSANG YONG\Select from vehicle\Rexton2\Petrol	Program key,
	SSANG YONG\Select from vehicle\Rexton3\XDi system	Program key,Delete key,
	SSANG YONG\Select from vehicle\Rexton3\Diesel	Program key,
	SSANG YONG\Select from vehicle\Rexton3\Petrol	Program key,
斯玛特	SMART\BR453\Immobilizer	Test,Read PIN code,Program key,Recover configured data,
IVECO	IVECO\Daily\2007-2012	Key count,Add key,Remote count,Program remote,
	IVECO\Daily\2012-	Key info,Add key,Read PIN code,Make dealer key,

	IVECO\Eurocargo\2007-2012	Key count,Add key,Remote count,Program remote,
Mercedes-Benz	Mercedes-Benz\Tail box controlling\E series\213.148 E300 SEDAN(2017)	Trunk control,
	Mercedes-Benz\Remote\163-ML Class	Remote,Reset ECU,
ISUZU	ISUZU\ID-MAX\Remote	Program remote,Delete remote,
	ISUZU\ID-MAX\Key\Type 4 (48 chip)	Program key,Delete key,Read key data,Clear fault code,
ALFA ROMEO	ALFA ROMEO \Select from type\Type 1	Key info,Program key,Backup immo data,Make dealer key,
	ALFA ROMEO \Select from type\Type 2	Read key count,Program key,Read remote count,Program remote,
	ALFA ROMEO \Select from type\Type 3	Read key count,All key lost,Read PIN code,Make dealer key,
	ALFA ROMEO \Select from type\Type 4	Key count,Immobilizer,Delete key,
	ALFA ROMEO \Select from type\Type 5	Key count,Immobilizer,Delete key,
	ALFA ROMEO \Select from type\Type 6	Immobilizer,Delete key,
	ALFA ROMEO \Select from type\Type 7	Program key,Delete key,Obtain immo ID,
	ALFA ROMEO \Select from type\Type 8	Key info,Add key,
	ALFA ROMEO \Select from type\Type 9	Key count,Add key,Remote count,Program remote,
	ALFA ROMEO\Select from vehicle\IMMO\Giulietta\2010 - 2012\Immobilizer	Key count,Add key,Remote count,Program remote,
JAGUAR	JAGUAR\Select from type\Smart key\Type 1	Delete smart key,Add smart key,
	JAGUAR\Select from type\Smart key\Type 2	Add smart key,All smart key lost,
	JAGUAR\Select from type\Smart key\Type 3	Add smart key,All smart key lost,
	JAGUAR\Select from type\Smart key\Type 4	Add smart key,All smart key lost,
	JAGUAR\Select from type\Remote\Type 1	Program remote,Remote count,
	JAGUAR\Select from type\Remote\Type 2	Program remote,Delete remote,
	JAGUAR\Select from type\Immobilizer\Type 1	All key lost,
	JAGUAR\Select from vehicle\2015 -\Smart key\Type 1(FK72)	Add smart key,
	JAGUAR\Select from vehicle\2015 -\Smart key\Type 2(HPLA)	Add smart key,
	JAGUAR\Select from vehicle\2015 -\Smart key\Type 3(write to working key)	Write a workable key,Read key ID,
	JAGUAR\Select from vehicle\SOVERIGN\Immobilizer	All key lost,
	JAGUAR\Select from vehicle\X-TYPE\Immobilizer	All key lost,
	JAGUAR\Select from vehicle\XJ6\2003-2007\Immobilizer	All key lost,
	JAGUAR\Select from vehicle\XJ8\2003-2007\Immobilizer	All key lost,
	JAGUAR\Select from vehicle\XJR\2004 -\Immobilizer	All key lost,
JAGUAR\Select from vehicle\XK\2006-2014\Smart remote	Program remote,Remote count,	
JAGUAR\Select from vehicle\XKR\2006-2014\Smart remote	Program remote,Remote count,	
LANCIA	LANCIA\IMMO\Ypsilon\2007 -2012\Immobilizer	Key count,Add key,Remote count,Program remote,
	LANCIA\IMMO\Ypsilon\2013 -\Immobilizer	Key count,All key lost,Read PIN code,Make dealer key,
	SUBARU\Select from vehicle\B4\2009-	Add smart key,Delete smart key,Key count,Read PIN code,Clear engine fault code,
	SUBARU\Select from vehicle\Baja\2005-2007	All key lost,Delete key,
	SUBARU\Select from vehicle\Brz\2013-2015\Without smart	Key count,Add key,Delete key,Add remote,Delete remote,
	SUBARU\Select from vehicle\Brz\2013-2015\With smart	Add smart key,Delete smart key,

SUBARU	SUBARU>Select from vehicle\Crosstrek\2014 -\Without smart	Check key count,Add key,All key lost,Delete key,Register dashboard ECU,Register engine ECU,Program remote,
	SUBARU>Select from vehicle\Crosstrek\2014 -\With smart	Add smart key,Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate key emulator,Bind key emulator,
	SUBARU>Select from vehicle\Forester\2013 -\Without smart	Check key count,Add key,All key lost,Delete key,Register dashboard ECU,Register engine ECU,Program remote,
	SUBARU>Select from vehicle\Forester\2013 -\With smart	Add smart key,Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate key emulator,Bind key emulator,
	SUBARU>Select from vehicle\Impreza\Without smart-2012(4D 60/62 chip)	All key lost,Delete key,
	SUBARU>Select from vehicle\Impreza\Without smart\2013-(4D 82G chip)	Check key count,Add key,All key lost,Delete key,Register dashboard ECU,Register engine ECU,Program remote,
	SUBARU>Select from vehicle\Impreza\With smart-2012	Add smart key,Delete smart key,Key count,Read PIN code,Clear engine fault code,
	SUBARU>Select from vehicle\Impreza\With smart\2013-	Add smart key,Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate key emulator,Bind key emulator,
	SUBARU>Select from vehicle\Legacy\Without smart\4D 60/62 chip	All key lost,Delete key,
	SUBARU>Select from vehicle\Legacy\With smart	Add smart key,Delete smart key,Key count,Read PIN code,Clear engine fault code,
	SUBARU>Select from vehicle\Levorg\2015 -\With smart	Add smart key,Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate key emulator,Bind key emulator,
	SUBARU>Select from vehicle\Outback\Without smart\2005-2012	All key lost,Delete key,
	SUBARU>Select from vehicle\Outback\Without smart\2013-	Add key,Read PIN code,
	SUBARU>Select from vehicle\Sti	All key lost,Delete key,
	SUBARU>Select from vehicle\Tribeca\Without smart\Type 1	All key lost,Delete key,
	SUBARU>Select from vehicle\Tribeca\Without smart\Type 2(North America)	Key count,Add key,Delete key,Add remote,Delete remote,
	SUBARU>Select from vehicle\Tribeca\With smart(North America)	Add smart key,Delete smart key,
	SUBARU>Select from vehicle\WRX\ -2013\Without smart\4D 60/62 chip	All key lost,Delete key,
	SUBARU>Select from vehicle\WRX\2014 -\Without smart\4D 82G chip	Check key count,Add key,All key lost,Delete key,Register dashboard ECU,Register engine ECU,Program remote,
	SUBARU>Select from vehicle\WRX\2014 -\With smart	Add smart key,Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate key emulator,Bind key emulator,
SUBARU>Select from vehicle\XV Crosstrek\2013 -\Without smart	Check key count,Add key,All key lost,Delete key,Register dashboard ECU,Register engine ECU,Program remote,	
SUBARU>Select from vehicle\XV Crosstrek\2013 -\With smart	Add smart key,Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate key emulator,Bind key emulator,	
SUBARU>Select from vehicle\XV\2013 -\Without smart	Check key count,Add key,All key lost,Delete key,Register dashboard ECU,Register engine ECU,Program remote,	
SUBARU>Select from vehicle\XV\2013 -\With smart	Add smart key,Delete smart key,Detect key count,Register smart ECM,Register engine EMC,Program remote starter,Generate key emulator,Bind key emulator,	
TRUMPCHI	TRUMPCHI\GA3S(PHEV)\Smart key	Program smart key,
	TRUMPCHI\GA4\Smart key	Program smart key,
	TRUMPCHI\GA4\Immobilizer	Add key,Delete key,Read key count,
	TRUMPCHI\GE3\Smart key	Program smart key,
	TRUMPCHI\GM8\Smart key	Program smart key,
	TRUMPCHI\GS3\Smart key	Program smart key,
	TRUMPCHI\GS3\Immobilizer	Add key,Delete key,Read key count,
	TRUMPCHI\GS4(PHEV)\Smart key	Program smart key,
	TRUMPCHI\GS7\Smart key	Program smart key,
	TRUMPCHI\New energy vehicles\Immobilizer	Add key,Delete key,Read key count,
DS	DS>Select from type\Replace engine ECUM745	Replace engine ECU,
	SUZUKI\China\Kizashi\Smart key	Program smart key (PIN required),Program smart key (without PIN),Obtain immoID,
	SUZUKI\Suzuki(China)\New Alto	Program key,Obtain immoID,
	SUZUKI\China\Swift\2015 -\Immobilizer\Type 2	Lost all key programming,Obtain immoID,

SUZUKI	SUZUKI\Japan\Alto\Immobilizer\1996 -2002	Immobilizer,Delete ey,
	SUZUKI\Japan\Baleno\Immobilizer\1996 -2001	Immobilizer,Delete ey,
	SUZUKI\Japan\Grand Vitaral\Immobilizer\1996 -2002	Immobilizer,Delete ey,
	SUZUKI\Japan\Grand Vitaral\Immobilizer\2002 -	Immobilizer,Delete ey,
	SUZUKI\Japan\Jimny\Immobilizer	Immobilizer,Delete ey,
	SUZUKI\Japan\Swift\Immobilizer\1996 -2004	Immobilizer,Delete ey,
	SUZUKI\Japan\Vitaral\Immobilizer\1996 -2002	Immobilizer,Delete ey,
	SUZUKI\Japan\Vitaral\Immobilizer\2002 -	Immobilizer,Delete ey,
	SUZUKI\Japan\Wagon R\Immobilizer\1998 -	Program key,Delete key,Register immobiliser,
MG	MG\IMMO\MG6\2018 -	Add key,Delete key,
LAND ROVER	LAND ROVER\Select from vehicle\2015 -\Smart key\Type 1(FK72)	Add smart key,
	LAND ROVER\Select from vehicle\2015 -\Smart key\Type 2(HPLA)	Add smart key,
	LAND ROVER\Select from vehicle\2015 -\Smart key\Type 3(write to working key)	Write a workable key,Read key ID,
FIAT	FIAT\Middle East\500\2007 -	Key count,All key lost,Read PIN code,Make dealer key,
	FIAT\Middle East\Doblo\2009	Key count,Add key,Remote count,Program remote,
	FIAT\Asia\500	Key count,All key lost,Read PIN code,Make dealer key,
	FIAT\Asia\Linea	Key count,Add key,Remote count,Program remote,
	FIAT\Asia\Punto	Key count,Add key,Remote count,Program remote,
	FIAT\Asia\Punto grande\2006-2011	Key count,All key lost,Read PIN code,Make dealer key,
	FIAT\Asia\Viaggio\2013 -	Key count,All key lost,Read PIN code,Make dealer key,
	FIAT\South America\500\2010 -2012	Key count,All key lost,Read PIN code,Make dealer key,
	FIAT\South America\Bravo\2007 -	Key count,Add key,Remote count,Program remote,
	FIAT\South America\Siena\2008 -2012	Key count,Add key,Remote count,Program remote,
	FIAT\South America\Strada\2000 -2003	Key count,Add key,Remote count,Program remote,
	FIAT\Select from type\Immobilizer\Type 1	Immobilizer,
	FIAT\Select from type\Immobilizer\Type 10	Program key,Delete key,Obtain immo ID,
	FIAT\Select from type\Immobilizer\Type 11	Key count,All key lost,Read PIN code,Make dealer key,
	FIAT\Select from type\Immobilizer\Type 2	Immobilizer,
	FIAT\Select from type\Immobilizer\Type 3	Immobilizer,
	FIAT\Select from type\Immobilizer\Type 4	Add key,
	FIAT\Select from type\Immobilizer\Type 5	Key info,Add key,
	FIAT\Select from type\Immobilizer\Type 6	Key count,Immobilizer,Delete key,
	FIAT\Select from type\Immobilizer\Type 7	Key count,Immobilizer,Delete key,
	FIAT\Select from type\Immobilizer\Type 8	Key count,Add key,Remote count,Program remote,
	FIAT\Select from type\Immobilizer\Type 9	Immobilizer,Delete key,
	FIAT\Select from type\Smart key\Type 1	Add smart key,Delete smart key,
	FIAT\Select from type\Smart key\Type 2	Add smart key,Delete smart key,
	FIAT\Europe\500L	Key info,Add key,Read PIN code,Make dealer key,

	FIAT\Europe\500X	Add smart key,Delete smart key,
	FIAT\Europe\Freemont\Smart key	Add smart key,Delete smart key,
	FIAT\Europe\Idea\2003 -2012	Key count,Add key,Remote count,Program remote,
	FIAT\Europe\Linea\2007	Key count,Add key,Remote count,Program remote,
	FIAT\Europe\Palo	Key count,Add key,Remote count,Program remote,
	FIAT\Europe\Panda\2005 -2011	Key count,Add key,Remote count,Program remote,
	FIAT\Europe\Panda\2011 -	Key count,All key lost,Read PIN code,Make dealer key,
	FIAT\Europe\Phedra\2005 -	Add key,
	FIAT\Europe\Punto\2000 -2006	Key count,Add key,Remote count,Program remote,
	FIAT\Europe\Punto\2006 -2011	Key count,All key lost,Read PIN code,Make dealer key,
	FIAT\Europe\Qubo\2008 -	Key count,All key lost,Read PIN code,Make dealer key,
	FIAT\Europe\Scudo\ -2007\Ttype 1	Immobilizer,
	FIAT\Europe\Scudo\ -2007\Ttype 2	Immobilizer,
	FIAT\Europe\Scudo\ -2007\Ttype 3	Immobilizer,
	FIAT\Europe\Scudo\2008 -	Add key,
	FIAT\Europe\Sedici\Diesel\2006 -2010	Add new key,Add old key,Delete key,
	FIAT\Europe\Sedici\Diesel\2010 -	Add key,
	FIAT\Europe\Sedici\Petrol\2010	Key count,Immobilizer,Delete key,
	FIAT\Europe\Stilo\2000 -2006	Key count,Add key,Remote count,Program remote,
	FIAT\Europe\Ulysee\2002 -2010	Add key,
	FIAT\Europe\Ulysse\2002 -2005	Add key,
	FIAT\Europe\Ulysse\2005 -2010	Add key,
	FIAT\Europe\Viaggio\2012 -	Key count,All key lost,Read PIN code,Make dealer key,
CADILLAC	CADILLAC\XTS\2018\Smart key	All smart key lost,Add smart key,Read smart key count,Clear fault code,
OPEL	OPEL\Remote system\Antara	Program remote,Delete remote,
	OPEL\Remote system\Meriva	Program remote,Delete remote,
	OPEL\IMMO\Select from type\Ttype 6	All key lost,
	OPEL\IMMO\Select from vehicle\Antara	All key lost,
	OPEL\IMMO\Select from vehicle\Astra\Astra -J\2010-2016\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,Read PIN code,
	OPEL\IMMO\Select from vehicle\Astra\Astra -J\2010-2016\Immobilizer	All key lost,Add key,Read key count,Clear fault code,Read PIN code,
	OPEL\IMMO\Select from vehicle\Corsa\Corsa -D\Immobilizer	Add key,Delete key,Read PIN code,
	OPEL\IMMO\Select from vehicle\Meriva\Meriva -B\Immobilizer	Add key,Delete key,Read PIN code,
	OPEL\IMMO\Select from vehicle\Mokka\2012 -2018\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,Read PIN code,
	OPEL\IMMO\Select from vehicle\Mokka\2012 -2018\Immobilizer	All key lost,Add key,Read key count,Clear fault code,Read PIN code,
	OPEL\IMMO\Select from vehicle\Omega -B\Immobilizer\Ttype 2(CAN)	All key lost,Add key,Read key count,Clear fault code,Read PIN code,
	OPEL\IMMO\Select from vehicle\Omega -B\Smart key	Add smart key,All smart key lost,Read smart key count,
	OPEL\IMMO\Select from vehicle\Signum\2003 -2007	Program key,Delete key,Read PIN code,
	OPEL\IMMO\Select from vehicle\Vivaro(4A)\2014 -	Read PIN code,Program key,Recover backup data,

	OPEL\IMMO\Select from vehicle\Zafira\Zafira-C\2012-2016\Smart key	All smart key lost,Add smart key,Read key count,Clear fault code,Read PIN code,
	OPEL\IMMO\Select from vehicle\Zafira\Zafira-C\2012-2016\Immobilizer	All key lost,Add key,Read key count,Clear fault code,Read PIN code,
VW	VW\IMMO 3.5\Read PIN code	Dashboard,Immobiliser,Engine,
	VW\IMMO 3.5\Remote	Add remote>Delete remote,
	VW\IMMO 3.5\Immobilizer	Immobiliser,Dashboard,
	VOLKSWAGEN\IMMO4\NE24C64(2014 -)\Immobilizer	Make dealer key,Learn key(OBD),Backup EPROM,Recover EPROM>Delete key,Directly add key,Reset dashboard,Odometer adjustment,Unlock key,Backup immo data,
	VW\IMMO4\Visteon dashboard\Immobilizer	Backup EEPROM,Recover EEPROM,Read PIN code,Program key(OBD),Odometer adjustment,Reset dashboard,
MITSUBISHI	MITSUBISHI\Select from type\Immobilizer\Type 10	All key lost,Key count,
	MITSUBISHI\Select from type\Immobilizer\Type 1	Program key,
	MITSUBISHI\Select from type\Immobilizer\Type 12	Immobilization,
	MITSUBISHI\Select from type\Immobilizer\Type 13	Immobilization,
	MITSUBISHI\Select from type\Immobilizer\Type 6	Program key,
	MITSUBISHI\Select from type\Immobilizer\Type 7	All key lost,
	MITSUBISHI\Select from type\Immobilizer\Type 8	Add key,
	MITSUBISHI\Select from type\Immobilizer\Type 9	All key lost,Key count,
	MITSUBISHI\Select from type\Smart key\Type 3	Program smart key,
	MITSUBISHI\Select from type\Smart key\Type 4	Add smart key,Key count,
	MITSUBISHI\Select from type\Remote\Type 5	Program remote,
	MITSUBISHI\Select from type\Remote\Type 6	Program remote,
	MITSUBISHI\Select from type\Remote\Type 7	Program remote,
	MITSUBISHI\Select from type\Remote\Type 8	Program remote,
	MITSUBISHI\Select from vehicle\Middle East\Eclipse	Add key,Reset immo ECU,
	MITSUBISHI\Select from vehicle\Middle East\Eclipse Dicomna	Add key,Reset immo ECU,
	MITSUBISHI\Select from vehicle\Middle East\Endeavor	Add key,Reset immo ECU,
	MITSUBISHI\Select from vehicle\Middle East\Galant\E50/EADJ1/DJ2/DJ3	Add key,Reset immo ECU,
	MITSUBISHI\Select from vehicle\Middle East\Grandis	Add key,Reset immo ECU,
	MITSUBISHI\Select from vehicle\Middle East\GT3000	Add key,Reset immo ECU,
	MITSUBISHI\Select from vehicle\Middle East\L2001-2007	Add key,Reset immo ECU,
	MITSUBISHI\Select from vehicle\Middle East\Lancer\ck/cs/sw	Add key,Reset immo ECU,
	MITSUBISHI\Select from vehicle\Middle East\Lancer\cy/X/Sport/Sport back	Program key,
	MITSUBISHI\Select from vehicle\Middle East\Magna	Add key,Reset immo ECU,
	MITSUBISHI\Select from vehicle\Middle East\Nativa	Add key,Reset immo ECU,
	MITSUBISHI\Select from vehicle\Middle East\Outlander\cu/cw	Add key,Reset immo ECU,
	MITSUBISHI\Select from vehicle\Middle East\Pajero/Q/CK/BK/IO/Sport	Add key,Reset immo ECU,
	MITSUBISHI\Select from vehicle\Middle East\Sigma	Add key,Reset immo ECU,
	MITSUBISHI\Select from vehicle\Middle East\Space\Star\gear/wagon	Add key,Reset immo ECU,
	MITSUBISHI\Select from vehicle\Middle East\Strada	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\China\Attraga\2015-\Smart key	Program smart key,	

MITSUBISHI
I

MITSUBISHI\Select from vehicle\China\Mirage\Without smart	Add key,Program remote,
MITSUBISHI\Select from vehicle\China\Mirage\With smart-2014	Add smart key,Key count,
MITSUBISHI\Select from vehicle\China\TRITON2017 - \Smart key	Program smart key,
MITSUBISHI\Select from vehicle\China\Pajero Sport\2017 - \Smart key	Program smart key,
MITSUBISHI\Select from vehicle\China\Outlander - 2013\Immobilizer	Immobilizer,
MITSUBISHI\Select from vehicle\China\Outlander - 2013\Remote	Remote,
MITSUBISHI\Select from vehicle\China\Lancer\Immobilizer	Program key,
MITSUBISHI\Select from vehicle\China\Lancer\Remote	Program remote,
MITSUBISHI\Select from vehicle\Asia\Israel\Carisma	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Eclipse	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\EclipseDis mna	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Endeavor	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Galant\1994 - 2004	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Grandis	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\GT3000	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\L200\2011	Program key,
MITSUBISHI\Select from vehicle\Asia\Israel\L400	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Lancer\ck/cs/sw\Sport back	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Lancer\cy\Sport\X	Program key,
MITSUBISHI\Select from vehicle\Asia\Israel\Mirage	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Magnum	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Nativa	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Outlander\CAN\With smart	Program smart key,
MITSUBISHI\Select from vehicle\Asia\Israel\Outlander\2013	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Pajero	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Sigma	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Space\Star\gear	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Spacewagon\Without smart	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Israel\Spacewagon\With smart\2013 -	Program smart key,
MITSUBISHI\Select from vehicle\Asia\Israel\Strada	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\Delica\2007 - 2015	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\EVO 8	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\EVO 9	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\EVO10\Smart key	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\EVO10\Immobilization\2008 -2010	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\Grandis	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\L200 Triton - 2016	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\L200 Triton\2016 -\Type 1	Program key,

MITSUBISHI\Select from vehicle\Asia\Other\L200 Triton\2016-\Type 2	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\L200 Triton\2016-\Type 3	All key lost,
MITSUBISHI\Select from vehicle\Asia\Other\Lancer\CS	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Other\Lancer\CY	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\Outlander\2005 -2012	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\Pajero\CK\2000 -2010	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Asia\Japan\3000 GT\1996-2001	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Carisma\1996 -2004	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Colt\1996 -2000	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Eclipse\1996 -2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Galant[PIN1]\1996 -2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Galant[PIN2]\1996 -2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\L200\1999 -2006	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Lancer SW\1996 -2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Lancer\2003 -2006	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Lancer\1996 -2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Montero IO\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Montero Sport\1999-2004	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Montero\2001 -2006	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Montero\1999 -2000	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Nativa\2001 -2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero IO\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero PININ\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero sport\1999-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero\2000 -2005	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero\1999 -2000	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Shogun PININ\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Shogun Sport\1999-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Shogun\2000 -2005	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Shogun\1996 -2000	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space Gear\1996-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space Runner\1998 -1999	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space Runner\1999-2002	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space Start[PIN1]\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space Start[PIN2]\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space Wagon\1998 -1999	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Asia\Japan\Space Wagon\1999-2002	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\3000gt\1996 -	Add key,Reset immobiliser,

MITSUBISHI\Select from vehicle\Greece\Carisma\1996 - 2004	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Colt New\2002-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Colt\1996 -2000	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Galant\1996 - 2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\L200\1999 -2006	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Lancer SW\1996- 2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Lancer\1996 - 2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Pajero New\2000-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Pajero PININ\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Pajero sport\1999-2003	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Pajero\1996 - 2000	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Space Gear\1996-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Space Runner\1998-1999	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Space Runner\1999-2002	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Greece\Space Start\1999-	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Africa\L200 Triton\2006	Add key,Reset immobiliser,
MITSUBISHI\Select from vehicle\Africa\Lancer\2006 -2012	Program key,
MITSUBISHI\Select from vehicle\Africa\Outlander\2006	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Africa\Pajero\1999 -2006	Add key,Reset immo ECU,
MITSUBISHI\Select from vehicle\Africa\Shogun\2001 -2006	Add key,Reset immo ECU,
MAZDA\ICX-3\2017-\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\DEMIO\-\2001\Immobilizer	Key number,Delete key,Add key,
MAZDA\DEMIO\2002 -2007\Immobilizer	Key number,Delete key,Add key,
MAZDA\DEMIO\2008 -2013\Smart key	Add key,Clear key,Add remote,Delete remote,Key number,
MAZDA\DEMIO\2008 -2013\Immobilizer	Key number,Delete key,Add key,
MAZDA\DEMIO\2014-\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\M121\Immobilizer	Key number,Delete key,Add key,
MAZDA\M2\Type 1\Smart key	Add key,Clear key,Add remote,Delete remote,Key number,Switch ignition on,
MAZDA\M2\Type 3(2017-)\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\M3\Smart key\Type 2(2017-)	Add smart key,All smart key lost,Switch ignition on,
MAZDA\MX-5 MIATA\2005-2013\Immobilizer	Key number,Delete key,Add key,
MAZDA\MX-5\2017-\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\PREMACY\2005\Smart key	Key number,Delete key,Add key,
MAZDA\RX-8\2004-2009\Immobilizer	Key number,Delete key,Add key,
MAZDA\RX-8\2009\Smart key	Add key,Clear key,Add remote,Delete remote,Key number,
MAZDA\RX-8\2009\Immobilizer	Key number,Delete key,Add key,
MAZDA\Tribute\Immobilizer\2001 -2004	Key number,Delete key,Add key,
MAZDA\Tribute\Immobilizer\2005 -2008	Key number,Delete key,Add key,

MAZDA

	MAZDA\Tribute\Immobilizer\2009 -2011	Key number,Delete key,Add key,
	MAZDA\Ateza\2018 -\Smart key	Add smart key,All smart key lost,Switch ignition on,
RENAULT	RENAULT>Select from type\All\Type 0	Add key,
	RENAULT>Select from type\All\Type 1	Add key,
	RENAULT>Select from type\All\Type 2	Add key,
	RENAULT>Select from type\All\Type 3	Add key,
	RENAULT>Select from type\All\Type 4	Add key,
	RENAULT>Select from type\All\Type 5	Add key,
	RENAULT>Select from type\All\Type 6	Add key,
	RENAULT>Select from type\All\Type 7	Add key,
	RENAULT>Select from type\All\Type 8	Add key,
	RENAULT>Select from type\All\Type 9	Add key,
	RENAULT>Select from type\All\Type A	Add key,
	RENAULT>Select from type\All\Type B	Read PIN code,Program key,Recover backup data,
	RENAULT>Select from vehicle\Captur	Add key,Recover data,
	RENAULT>Select from vehicle\Clio\Clio II Ph2.	Add key,
	RENAULT>Select from vehicle\Clio\Clio III.\Without smart	Add key,
	RENAULT>Select from vehicle\Clio\Clio III.\With smart	Add key,
	RENAULT>Select from vehicle\Clio\Clio IV.\2012-	Add key,Recover data,
	RENAULT>Select from vehicle\Duster\Duster.\2010 -2012	Add key,
	RENAULT>Select from vehicle\Espace\Espace IV Ph2.	Add key,
	RENAULT>Select from vehicle\Espace\Espace IV.	Add key,
	RENAULT>Select from vehicle\Fluence\2009-2015.	Add key,
	RENAULT>Select from vehicle\Kangoo\Kangoo I.	Add key,
	RENAULT>Select from vehicle\Kangoo\Kangoo II.\2007-2012	Add key,
	RENAULT>Select from vehicle\Koleos\2008 -.	Add key,
	RENAULT>Select from vehicle\Laguna\Laguna II Ph2.	Add key,
	RENAULT>Select from vehicle\Laguna\Laguna II.	Add key,
	RENAULT>Select from vehicle\Laguna\Laguna III.\2007-2015	Add key,
	RENAULT>Select from vehicle\Logan\Logan.\Type 1	Add key,
	RENAULT>Select from vehicle\Logan\Logan.\Type 2	Add key,
	RENAULT>Select from vehicle\Master III\2010-2014	Add key,
	RENAULT>Select from vehicle\Master\Master.	Add key,
	RENAULT>Select from vehicle\Megane Scenic\2008.	Add key,
	RENAULT>Select from vehicle\Megane Scenic\1999-2002.	Read PIN code,Program key,
	RENAULT>Select from vehicle\Megane Scenic\Scenic III (2009-2015).	Add key,
RENAULT>Select from vehicle\Megane\Megane III.\2009-2015	Add key,	
RENAULT>Select from vehicle\Modus\Modus.\Without smart	Add key,	

	RENAULT>Select from vehicle\Primastar\Primastar.	Add key,
	RENAULT>Select from vehicle\Sanderol-2008.	Add key,
	RENAULT>Select from vehicle\Sanderol(2008-2012).	Add key,
	RENAULT>Select from vehicle\Scenic\Scenic III.\2009-2015	Add key,
	RENAULT>Select from vehicle\Symbol\Symbol.\Type 1	Add key,
	RENAULT>Select from vehicle\Symbol\Symbol.\Type 2	Add key,
	RENAULT>Select from vehicle\Thalia\Thalia.\Type 1	Add key,
	RENAULT>Select from vehicle\Thalia\Thalia.\Type 2	Add key,
	RENAULT>Select from vehicle\Trafic\Trafic II Ph2.	Add key,
	RENAULT>Select from vehicle\Trafic\Trafic II Ph3.\2010-2014	Add key,
	RENAULT>Select from vehicle\Trafic\Trafic(4A)\2014 -	Read PIN code,Program key,Recover backup data,
	RENAULT>Select from vehicle\Twingo\Twingo I Ph2.\2001-2006	Add key,
	RENAULT>Select from vehicle\Twingo\Twingo II.\2007-2013	Add key,
	RENAULT>Select from vehicle\Velsatis\-.2005.	Add key,
	RENAULT>Select from vehicle\Velsatis\2005-.	Add key,
	RENAULT>Select from vehicle\Vivaro\Vivaro.	Add key,
	RENAULT>Select from vehicle\Wind\2010-2013.	Add key,
BUICK	BUICK\GL8\2017-\Smart key\Type 2(2.5L)	All smart key lost,Add smart key,Read smart key count,Clear fault code,
	BUICK\Regal\2017-\Smart key	All smart key lost,Add smart key,Read smart key count,Clear fault code,
	BUICK\Verano\2017-\Smart key\Smart key	All smart key lost,Add smart eky,Read smart key count,
	BUICK\Verano\2017-\Immobilizer	All key lost,Clear fault code,Read key count,
PEUGEOT	PEUGEOT>Select from type\Replace engine ECU\M745	Replace engine ECU,
TOYOTA	TOYOTA>Select from type\IMMO\Type 8(Avanza)	G Immobilizer reset(All key lost),DOT Immobilizer reset(All key lost),
	TOYOTA>Select from vehicle\AVANZA\All key lost	G Immobilizer reset(All key lost),DOT Immobilizer reset(All key lost),
	TOYOTA>Select from vehicle\corolla EX\Immobilizer\4D	Add key,Delete key,All key lost,
	TOYOTA>Select from vehicle\corolla EX\Smart key\Type 1	Add smart key,Delete smart key,Reset PEPS,Reset PEPS & program smart key,
	TOYOTA>Select from vehicle\corolla EX\Smart key\Type 2	Smart key registration,Delete smart key,Reset immobox,
CITROEN	CITROEN>Select from type\Replace engine ECU\M745	Replace engine ECU,
	CITROEN>Select from vehicle\C4\Immobilizer\Type 2	Program key,
CHERY	CHERY\Remote\V5 series\Type 3	Program remote,Remote sync mode,
	CHERY\Remote\Eastar\Type 3	Program remote,Remote sync mode,
	CHERY\Remote\Cowin	Program remote,Remote sync mode,
	CHERY\Remote\Cowin 2	Program remote,Remote sync mode,
	CHERY\Remote\Cowin 5\Type 1	Program remote,Remote sync mode,
	CHERY\Remote\Cowin 5\Type 2	Read key count,Program remote,Clear fault code,
	CHERY\Remote\Tiggo 3\Type 3	Program remote,Remote sync mode,
	CHERY\Remote\Tiggo Facelift\Type 3	Program remote,Remote sync mode,
	GREAT WALL MOTOR\Hover\H2S\Mechanical key\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,

GREAT WALL MOTOR	GREAT WALL MOTOR\Hover\H3\Delphi -Remote(CAN)	Program remote,
	GREAT WALL MOTOR\Hover\H4\Keyless Entry(PEPS)	Immobilizer,Off line full system programming,Program PEPS,Program ESCL,Program engine ECU,Program T-box,
	GREAT WALL MOTOR\Hover\H5(Ann. edition)\Remote(CAN)	Program remote,
	GREAT WALL MOTOR\Hover\H6 coupe\2017 -\Smart key	Program key after deleting,All key lost,Add key,
	GREAT WALL MOTOR\Hover\H6(bluesign)\Delphi - remote(CAN)	Program remote,Unlocking OBC,
	GREAT WALL MOTOR\Hover\H6(bluesign)\UMC - remote(CAN)	Program remote,Unlocking OBC,
	GREAT WALL MOTOR\Hover\H6\2013 -2017\Mechanical key\Remote\Type 1	Program remote,Unlocking OBC,
	GREAT WALL MOTOR\Hover\H6\2013 -2017\Mechanical key\Remote\Type 2	Program remote,Unlocking OBC,
	GREAT WALL MOTOR\Hover\H6\2017 -\Smart key	Add key,All key lost,
	GREAT WALL MOTOR\Hover\IM6 -\2018\Smart key	Add key,All key lost,
	GREAT WALL MOTOR\Hover\IM6\2018 -\Button-type PEPS	All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key count,
	GREAT WALL MOTOR\Great Wall\C30EV\Remote(CAN)	Program immo and remote,
	GREAT WALL MOTOR\Great Wall\C50\2014 -2015\Smart key\Button-type PEPS	All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key count,
	GREAT WALL MOTOR\Great Wall\C50\2014 -2015\Smart key\Switch-type PEPS	All key lost,Program with working key,Replace solenoid valve,Replace PEPS,Replace EMS,EOL offline learn,Read key count,
	GREAT WALL MOTOR\Great Wall\Wingle 5\2017\Mechanical key\bar key\Remote(CAN)	Program remote,Unlocking OBC,
	GREAT WALL MOTOR\Great Wall\Wingle 5\2017\Mechanical key\bar key\IMMO\Delphi diesel(Bosch)	Read key count,Clear fault code,Reset PIN code,Program key,Delete key,Program immo ECU,Program engine ECU,Program engine VIN code,Program immo VIN code,Reset engine ECU,Reset immo ECU,Read engine VIN,
	GREAT WALL MOTOR\Great Wall\Wingle 5\2017\Mechanical key\bar key\IMMO\Delphi diesel(Bosch)	Read key count,Reset PIN code,Program key,Delete all keys,Program immo ECU,Program engine ECU,Program engine VIN code,Program immo VIN code,Reset engine ECU,Reset immo ECU,
GEELY\Gleagle\GC7\Read Shanghai Industrial IMMO data	Read PIN code,	
GEELY\Gleagle\GX2\Read Shanghai Industrial IMMO data	Read PIN code,	
GEELY\Gleagle\GX2\IMMO(with joint EMS)	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,	
GEELY\Gleagle\GX718\Read Shanghai Industrial IMMO data	Read PIN code,	
GEELY\Gleagle\GX718\Continental smart key	Program remote,	
GEELY\Gleagle\GX718\Narn smart key	Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,	
GEELY\Gleagle\GX720\Read Shanghai Industrial IMMO data	Read PIN code,	
GEELY\Gleagle\GX725\Read Shanghai Industrial IMMO data	Read PIN code,	
GEELY\Gleagle\GX725\Continental smart key	Program remote,	
GEELY\Gleagle\GX725\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,	
GEELY\Gleagle\GX725\Narn smart key	Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,	
GEELY\Gleagle\GX9\Read Shanghai Industrial IMMO data	Read PIN code,	
GEELY\Gleagle\GX9\Narn smart key	Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,	
GEELY\Gleagle\Panda\Read Shanghai Industrial IMMO data	Read PIN code,	
GEELY\Gleagle\Panda\IMMO(with joint EMS)	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,	
GEELY\Maple\Read Shanghai Industrial IMMO data	Read PIN code,	
GEELY\Geely\New Free Cruiser\Shanghai Hu Gong BCM(KWP)	Learn remote,Delete remote,	
GEELY\Geely\New Free Cruiser\IMMO(with joint EMS)	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,	
GEELY\Gleagle\Vision\Read Shanghai Industrial IMMO data	Read PIN code,	
GEELY\Emgrand\EC820\Read Shanghai Industrial IMMO data	Read PIN code,	
GEELY\Emgrand\EC825\Read Shanghai Industrial IMMO data	Read PIN code,	

GEELY

GEELY\Emgrand\EX8\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Emgrand \S1\Smart key system	Key count,Program key,Delete key,
GEELY\Emgrand \S1\IMMO	Program immo ECU,Reset immo ECU,
GEELY\Emgrand\X1\Body control system	Program remote,Remote count,
GEELY\Emgrand\X3\Smart key	Program remote,Offline key programming,
GEELY\Emgrand \X3\Nam smart key	Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,
GEELY\Emgrand\X3\Body control system	Program remote,Remote count,
GEELY\Emgrand\New Emgrand\Continental smart key(2015- 32-digit ESK)	PEPS learning,After-sales mode switch,ESCL erase ESK,PEPS erase ESK,ESCL learning,PEPS configuration,Program key,Read key count,
GEELY\Emgrand\New Emgrand\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
GEELY\Yinglun\SC3\Shanghai Hu Gong BCM(KWP)	Learn remote,Delete remote,
GEELY\Yinglun\SC5\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Yinglun\SC6\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Yinglun\SC7\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Yinglun\SC7\Shanghai Hu Gong BCM(KWP)	Learn remote,Delete remote,
GEELY\Yinglun\SX718\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Yinglun\SX718\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
GEELY\Yinglun\SX718\Lear remote	Program remote,
GEELY\Yinglun\SX718\Nam smart key	Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,
GEELY\Yinglun\SX720\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Yinglun\SX720\Continental smart key	Program remote,
GEELY\Yinglun\SX720\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
GEELY\Yinglun\SX720\Nam smart key	Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,
GEELY\Yinglun\SX725\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Yinglun\GX725\Continental remote	Program remote,
GEELY\Yinglun\GX725\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
GEELY\Yinglun\GX725\Nam smart key	Reset EMS,Reset PEPS,Program key,Program EMS,Program ESCL,Delete key,Program PEPS,
GEELY\Yinglun\New ocean view\Shanghai Hu Gong BCM(KWP)	Learn remote,Delete remote,
GEELY\Yinglun\New Ocean View\IMMO(with joint EMS)	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
GEELY\Yinglun\CROSS\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Yinglun\CROSS\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
GEELY\Yinglun\CROSS3\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Yinglun\CROSS3\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
GEELY\Yinglun\CROSS2/ Yinglun SC5\Read Shanghai Industrial IMMO data	Read PIN code,
GEELY\Yinglun\CROSS2/ Yinglun SC5\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
GEELY\Yinglun\Ocean View\Industrial traffic IMMO	Immobilization,Program engine,Reset engine,Reset immobiliser,Delete key,Program key,Reset PIN code,Clear fault code,
GEELY\Yinglun\CROSS\Read Shanghai Industrial IMMO data	Read PIN code,
KIA\Select from type\Smart key\General area\Type 1(with slot K)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from type\Smart key\General area\Type 2(with slot K)	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,

KIA\Select from type\Smart key\General area\Type 3(without slot CAN)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from type\Smart key\General area\Type 4(without slot K)	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from type\Smart key\USA\Type 1(with slot K)	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from type\Smart key\USA\Type 2(with slot K)	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from type\Smart key\USA\Type 3(without slot CAN)	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from type\Smart key\USA\Type 4(without slot K)	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from type\Remote system\16 PIN\Type 6(K)	Program remote,
KIA\Select from type\Immobilizer\Type 7(K)	Immobilizer,ECM neutral mode,Read key count,
KIA\Select from type\Immobilizer\Type 8(CAN)	Immobilizer,neutral mode,
KIA\Select from type\Immobilizer\Type 9(CAN)	Immobilizer,neutral mode,
KIA\Select from vehicle\China\K3(YDC)\2012 - \Remote\Type 2	Program remote,
KIA\Select from vehicle\China\K4(PFC)\2015 -\Remote	Program remote,
KIA\Select from vehicle\China\K4(PFC)\2015 -\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\K5 HEV(JFC HEV)\2016-2018\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\China\K5 HEV(JFC HEV)\2016-2018\Remote	Program remote,
KIA\Select from vehicle\China\K5 HEV(JFC HEV)\2016-2018\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\K5(JFC)\2015 -2018\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\China\K5(JFC)\2015 -2018\Remote	Program remote,
KIA\Select from vehicle\China\K5(JFC)\2015 -2018\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\KX3(KC)\2015 -\Remote	Program remote,
KIA\Select from vehicle\China\KX3(KC)\2015 -\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\KX5(QLC)\2016 -\Remote	Program remote,
KIA\Select from vehicle\China\KX7(QMC)\2017 -\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\China\KX7(QMC)\2017 -\Remote	Program remote,
KIA\Select from vehicle\China\Rio(LCC)\2004 -2008\Remote	Program remote,
KIA\Select from vehicle\China\Sportage R(SLC)\2010-2014\Remote	Program remote,
KIA\Select from vehicle\China\Sportage R(SLC)\2015 -\Remote	Program remote,
KIA\Select from vehicle\China\Sportage(KMC)\2007 -2012\Remote\Type 1	Program remote,
KIA\Select from vehicle\China\Sportage(KMC)\2007 -2012\Remote\Type 2	Program remote,
KIA\Select from vehicle\China\Sportage(KMC)\2007 -2012\Immobilizer\Petrol 2.7 \Type 2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\Sportage(KMC)\2013 -2015\Remote\Type 2	Program remote,
KIA\Select from vehicle\China\Sportage(KMC)\2013 -2015\Immobilizer\Type 2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\Sportage(KMC)\2013 -2015\Immobilizer\Type 3	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\Forte(TDC)\2009 -\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\China\Forte(TDC)\2009 -\Remote	Program remote,
KIA\Select from vehicle\China\Forte(TDC)\2009 -\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\China\Soul(AMC)\2010\Remote	Program remote,
KIA\Select from vehicle\China\Soul(AMC)\2010\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,

KIA\Select from vehicle\China\Soul(AMC)\2012 - 2015\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\China\Soul(AMC)\2012 - 2015\Remote	Program remote,
KIA\Select from vehicle\China\Soul(AMC)\2012 - 2015\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\China\Cerato(LDC)\2005 - 2017\Remote	Program remote,
KIA\Select from vehicle\China\Optima(MSC)\2004 - 2014\Remote\Type 2	Program remote,
KIA\Select from vehicle\China\Rio(JBC)\2007 - 2014\Remote	Program remote,
KIA\Select from vehicle\General area\Carnival\Sedona(GQ)\2002 -2006\Remote	Program remote,
KIA\Select from vehicle\General area\Carnival\Sedona(GQ)\2002 -2006\Immobilizer\Type 1	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carnival\Sedona(VQ)\2006 -2014\Remote	Program remote,
KIA\Select from vehicle\General area\Carnival\Sedona(VQ)\2006 -	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Carnival\Sedona(VQ)\2006 -	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carnival\Sedona(VQ)\2006 -	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carnival\Sedona(VQ)\2006 -	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Carnival\Sedona(YP)\2015 -2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Carnival\Sedona(YP)\2015 -2016\Remote	Program remote,
KIA\Select from vehicle\General area\Carnival\Sedona(YP)\2015 -2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Cee'd(ED)\2006 - 2013\Remote	Program remote,
KIA\Select from vehicle\General area\Cee'd(ED)\2006 - 2013\Immobilizer\Type 1	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Cee'd(ED)\2006 - 2013\Immobilizer\Type 2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Cee'd(JD)\2013 - 2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Cee'd(JD)\2013 - 2016\Remote	Program remote,
KIA\Select from vehicle\General area\Cee'd(JD)\2013 - 2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\K2500\K2700\K3000\K3000S(PU)\2004 -	Program remote,
KIA\Select from vehicle\General area\K2500\K2700\K3000\K3000S(PU)\2013 -	Program remote,
KIA\Select from vehicle\General area\K2500\K2700\K3000\K3000S(PU)\2013 -	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\K2500\K2700\K3000\K3000S(PU)\2013 -	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\K2500\K2700\K3000\K3000S(PU)\2013 -	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Optima HEV(JF HEV)\2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Optima HEV(TF HEV)\2013-2014\Smart key	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from vehicle\General area\Optima HEV(TF HEV)\2013-2014\Remote	Program remote,
KIA\Select from vehicle\General area\Optima HEV(TF HEV)\2013-2014\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Optima HEV(TF HEV)\2015\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Optima(JF)\2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Optima(JF)\2016\Remote	Program remote,
KIA\Select from vehicle\General area\Optima(JF)\2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Optima(TF)\2011 - 2013\Smart key	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from vehicle\General area\Optima(TF)\2011 - 2013\Remote	Program remote,
KIA\Select from vehicle\General area\Optima(TF)\2011 - 2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,

KIA\Select from vehicle\General area\Optima(TF)\2014 - 2015\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Optima(TF)\2014 - 2015\Remote	Program remote,
KIA\Select from vehicle\General area\Optima(TF)\2014 - 2015\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Optima\Magentis(MG)\2006 -2010\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\General area\Optima\Magentis(MG)\2006 -2010\Remote	Program remote,
KIA\Select from vehicle\General area\Optima\Magentis(MG)\2006 -2010\Immobilizer\T\3	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Optima\Magentis(MS)\2001 -2002\Remote	Program remote,
KIA\Select from vehicle\General area\Optima\Magentis(MS)\2003 -2006\Remote	Program remote,
KIA\Select from vehicle\General area\Picanto(SA)\2003 - 2005\Remote	Program remote,
KIA\Select from vehicle\General area\Picanto(SA)\2003 - 2005\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Picanto(SA)\2006 - 2011\Remote	Program remote,
KIA\Select from vehicle\General area\Picanto(TA)\2012 - 2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Picanto(TA)\2012 - 2017\Remote	Program remote,
KIA\Select from vehicle\General area\Picanto(TA)\2012 - 2017\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Pregio(FP)\2006\Immobilizer\T\1	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Quoris(KH)\2013 - 2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Shuma\Spectra(SD)\2002\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Shuma\Spectra(SD)\2003 -2004\Remote	Program remote,
KIA\Select from vehicle\General area\Shuma\Spectra(SD)\2003 -2004\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sportage(KM)\Diesel\Remote	Program remote,
KIA\Select from vehicle\General area\Sportage(KM)\Diesel\Immobilizer\Petrol\G 2.0	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sportage(KM)\Diesel\Immobilizer\Petrol\G 2.7	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sportage(KM)\2006 - 2010\Remote	Program remote,
KIA\Select from vehicle\General area\Sportage(KM)\2006 - 2010\Immobilizer\Diesel\T\3	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Sportage(KM)\2006 - 2010\Immobilizer\Petrol\G 2.0\T\2	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Sportage(KM)\2006 - 2010\Immobilizer\Petrol\G 2.7\T\2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sportage(QL)\2016 - 2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Sportage(QL)\2016 - 2017\Remote	Program remote,
KIA\Select from vehicle\General area\Sportage(QL)\2016 - 2017\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sportage(QLE)\2016 -2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Sportage(QLE)\2016 -2017\Remote	Program remote,
KIA\Select from vehicle\General area\Sportage(QLE)\2016 -2017\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sportage(SL)\2011 - 2013\Smart key	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from vehicle\General area\Sportage(SL)\2011 - 2013\Remote	Program remote,
KIA\Select from vehicle\General area\Sportage(SL)\2011 - 2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Sportage(SL)\2014 - 2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Sportage(SL)\2014 - 2016\Remote	Program remote,
KIA\Select from vehicle\General area\Sportage(SL)\2014 - 2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,

KIA

KIA\Select from vehicle\General area\Sportage(SLE)\2011-2013\Smart key	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from vehicle\General area\Sportage(SLE)\2011-2013\Remote	Program remote,
KIA\Select from vehicle\General area\Sportage(SLE)\2011-2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Sportage(SLE)\2014-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Sportage(SLE)\2014-2016\Remote	Program remote,
KIA\Select from vehicle\General area\Sportage(SLE)\2014-2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Venga(YN)\2010-2012\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\General area\Venga(YN)\2010-2012\Remote	Program remote,
KIA\Select from vehicle\General area\Venga(YN)\2010-2012\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Venga(YN)\2013-2015\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Venga(YN)\2013-2015\Remote	Program remote,
KIA\Select from vehicle\General area\Venga(YN)\2013-2015\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Carens(FJ)\2003-2005\Remote	Program remote,
KIA\Select from vehicle\General area\Carens(FJ)\2006-2007\Remote	Program remote,
KIA\Select from vehicle\General area\Clarus\Forte(YD)\2013-2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Clarus\Forte(YD)\2013-2017\Remote	Program remote,
KIA\Select from vehicle\General area\Clarus\Forte(YD)\2013-2017\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carens\Rondo(RP)\2014-2016\Remote	Program remote,
KIA\Select from vehicle\General area\Cadenza(VG)\2010-2012\Remote	Program remote,
KIA\Select from vehicle\General area\Cadenza(VG)\2013-2016\Remote	Program remote,
KIA\Select from vehicle\General area\Cadenza(YG)\2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Cadenza(YG)\2017\Remote	Program remote,
KIA\Select from vehicle\General area\Cadenza(YG)\2017\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Rio(JB)\2005-2011\Remote	Program remote,
KIA\Select from vehicle\General area\Rio(QBR)\2012-2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Rio(QBR)\2012-2017\Remote	Program remote,
KIA\Select from vehicle\General area\Rio(QBR)\2012-2017\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Rio(UB)\2012-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Rio(UB)\2012-2016\Remote	Program remote,
KIA\Select from vehicle\General area\Rio(UB)\2012-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Carens(UN)\2007-2013\Immobilizer\Diesel\1.6 TCI-U2	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Opirus(GH)\2007-2008\Remote	Program remote,
KIA\Select from vehicle\General area\Opirus(GH)\2007-2008\Immobilizer\Type 1	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Opirus(GH)\2007-2008\Immobilizer\Type 2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Opirus(GH)\2009-2010\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\General area\Opirus(GH)\2009-2010\Remote	Program remote,
KIA\Select from vehicle\General area\Opirus(GH)\2009-2010\Immobilizer\Type 1	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Opirus(GH)\2009-2010\Immobilizer\Type 2	Program key,ECM neutral mode,Read key count,

KIA\Select from vehicle\General area\Soul EV(PS EV)\2015-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Soul(AM)\2009-2010\Remote	Program remote,
KIA\Select from vehicle\General area\Soul(AM)\2009-2010\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Soul(AM)\2011-2014\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Soul(PS)\2013-2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Soul(PS)\2013-2016\Remote	Program remote,
KIA\Select from vehicle\General area\Soul(PS)\2013-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sorento(BL)\2002-2005\Remote	Program remote,
KIA\Select from vehicle\General area\Sorento(BL)\2006-2009\Remote	Program remote,
KIA\Select from vehicle\General area\Sorento(BL)\2006-2009\ImmobilizerType 2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sorento(UM)\2015-2016\Remote	Program remote,
KIA\Select from vehicle\General area\Sorento(UMA)-Mexico\2016\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Sorento(UMA)-Mexico\2016\Remote	Program remote,
KIA\Select from vehicle\General area\Sorento(UMA)-Mexico\2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Sorento(XM)\2009-2012\Remote	Program remote,
KIA\Select from vehicle\General area\Sorento(XM)\2013-2015\Remote	Program remote,
KIA\Select from vehicle\General area\Mohave\Borrego(HM)\2009-2016\Remote	Program remote,
KIA\Select from vehicle\General area\Mohave\Borrego(HM)\2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\General area\Mohave\Borrego(HM)\2017\Remote	Program remote,
KIA\Select from vehicle\General area\Mohave\Borrego(HM)\2017\ImmobilizerType 1	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\General area\Mohave\Borrego(HM)\2017\ImmobilizerType 2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General area\Cerato(LD)\2003-2006\Remote	Program remote,
KIA\Select from vehicle\General area\Cerato(LD)\2007-2009\Remote	Program remote,
KIA\Select from vehicle\General area\Cerato(LD)\2007-2009\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\AMANTI(GH)\2009\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\USA\AMANTI(GH)\2009\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Forte\Forte koup(TD)\2009-2013\Remote	Program remote,
KIA\Select from vehicle\USA\K900(KH)\2015-2017\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\OPTIMA(MS)\2001-2002\Remote	Program remote,
KIA\Select from vehicle\USA\OPTIMA(MS)\2003-2006\Remote	Program remote,
KIA\Select from vehicle\USA\RIO(BC)\2003-2005\Remote	Program remote,
KIA\Select from vehicle\USA\RIO(JB)\2006-2012\Remote	Program remote,
KIA\Select from vehicle\USA\Sedona(VQ)\2006\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Sedona(VQ)\2007-2014\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Sedona(YP)\2015-2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Sedona(YP)\2015-2016\Remote	Program remote,
KIA\Select from vehicle\USA\Sedona(YP)\2015-2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Spectra(LD)\2004-2006\Remote	Program remote,

KIA\Select from vehicle\USA\Spectra(LD)\2007 - 2009\Remote	Program remote,
KIA\Select from vehicle\USA\Spectra(LD)\2007 - 2009\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Sportage(KM)\2005 - 2006\Remote	Program remote,
KIA\Select from vehicle\USA\Sportage(KM)\2007 - 2010\Remote	Program remote,
KIA\Select from vehicle\USA\Sportage(KM)\2007 - 2010\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Sportage(QL)\2017\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Sportage(QL)\2017\Remote	Program remote,
KIA\Select from vehicle\USA\Sportage(QL)\2017\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Sportage(SL)\2011 - 2013\Smart key	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA\Select from vehicle\USA\Sportage(SL)\2011 - 2013\Remote	Program remote,
KIA\Select from vehicle\USA\Sportage(SL)\2011 - 2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Sportage(SL)\2014 - 2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Sportage(SL)\2014 - 2016\Remote	Program remote,
KIA\Select from vehicle\USA\Sportage(SL)\2014 - 2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Rondo(UN)\2007 - 2010\Remote	Program remote,
KIA\Select from vehicle\USA\Rondo(UN)\2007 - 2010\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Cadenza(VG)\2014 - 2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Cadenza(VG)\2014 - 2016\Remote	Program remote,
KIA\Select from vehicle\USA\Cadenza(VG)\2014 - 2016\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Rio(UB)\2012 -2017\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Rio(UB)\2012 -2017\Remote	Program remote,
KIA\Select from vehicle\USA\Rio(UB)\2012 - 2017\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Forte(YD)\2014 -2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Forte(YD)\2014 - 2016\Remote	Program remote,
KIA\Select from vehicle\USA\Forte(YD)\2014 - 2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Soul EV(PS EV)\2015- 2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Soul(AM)\2010\Remote	Program remote,
KIA\Select from vehicle\USA\Soul(AM)\2010\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Soul(AM)\2011 -2013\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA\Select from vehicle\USA\Soul(AM)\2011 -2013\Remote	Program remote,
KIA\Select from vehicle\USA\Soul(AM)\2011 - 2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Soul(PS)\2014 -2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA\Select from vehicle\USA\Soul(PS)\2014 -2016\Remote	Program remote,
KIA\Select from vehicle\USA\Soul(PS)\2014 - 2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Sorento(BL)\2003 - 2006\Remote	Program remote,
KIA\Select from vehicle\USA\Sorento(BL)\2007 - 2009\Remote	Program remote,
KIA\Select from vehicle\USA\Sorento(BL)\2007 - 2009\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA\Select from vehicle\USA\Sorento(UMA)\2016 - 2017\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,

KIA>Select from vehicle\USA\Sorento(UMA)\2016 - 2017\Remote	Program remote,
KIA>Select from vehicle\USA\Sorento(UMA)\2016 - 2017\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA>Select from vehicle\USA\Sorento(XM)\2011 - 2013\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA>Select from vehicle\USA\Sorento(XM)\2011 - 2013\Remote	Program remote,
KIA>Select from vehicle\USA\Sorento(XM)\2011 - 2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA>Select from vehicle\USA\Sorento(XM)\2014 - 2015\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,PDM neutral mode,ESCL neutral mode,
KIA>Select from vehicle\USA\Sorento(XM)\2014 - 2015\Remote	Program remote,
KIA>Select from vehicle\USA\Sorento(XM)\2014 - 2015\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA>Select from vehicle\USA\Optima(JF)\2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA>Select from vehicle\USA\Optima(JF)\2016\Remote	Program remote,
KIA>Select from vehicle\USA\Optima(JF)\2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA>Select from vehicle\USA\Optima(JFA)\2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA>Select from vehicle\USA\Optima(JFA)\2016\Remote	Program remote,
KIA>Select from vehicle\USA\Optima(JFA)\2016\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA>Select from vehicle\USA\Optima(MG)\2006\Remote	Program remote,
KIA>Select from vehicle\USA\Optima(MG)\2006\Immobilizer	Program key,ECM neutral mode,Read key count,
KIA>Select from vehicle\USA\Optima(MG)\2007 - 2008\Remote	Program remote,
KIA>Select from vehicle\USA\Optima(MG)\2007 - 2008\ImmobilizerType 1	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA>Select from vehicle\USA\Optima(MG)\2007 - 2008\ImmobilizerType 2	Program key,ECM neutral mode,Read key count,
KIA>Select from vehicle\USA\Optima(MG)\2009\Remote	Program remote,
KIA>Select from vehicle\USA\Optima(MG)\2009\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA>Select from vehicle\USA\Optima(MG)\2010\Smart key\Without ESCL	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA>Select from vehicle\USA\Optima(MG)\2010\Smart key\With ESCL	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA>Select from vehicle\USA\Optima(MG)\2010\Remote	Program remote,
KIA>Select from vehicle\USA\Optima(MG)\2010\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA>Select from vehicle\USA\Optima(TF/QF)\2011 - 2013\Smart key	Program smart key,ECM neutral mode,ESCL neutral mode,PDM neutral mode,SMK neutral mode,
KIA>Select from vehicle\USA\Optima(TF/QF)\2011 - 2013\Remote	Program remote,
KIA>Select from vehicle\USA\Optima(TF/QF)\2011 - 2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA>Select from vehicle\USA\Optima(TF/QF)\2014 - 2015\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA>Select from vehicle\USA\Optima(TF/QF)\2014 - 2015\Remote	Program remote,
KIA>Select from vehicle\USA\Optima(TF/QF)\2014 - 2015\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA>Select from vehicle\USA\Optima hybrid(TFHEV)\2011 - 2012\Remote	Program remote,
KIA>Select from vehicle\USA\Optima hybrid(TFHEV)\2013\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA>Select from vehicle\USA\Optima hybrid(TFHEV)\2013\Remote	Program remote,
KIA>Select from vehicle\USA\Optima hybrid(TFHEV)\2013\Immobilizer	Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode,
KIA>Select from vehicle\USA\Optima hybrid(TFHEV)\2014 - 2016\Smart key	Smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,
KIA>Select from vehicle\USA\Borrego(HM)\2009 - 2011\Smart key	Program smart key,ECM neutral mode,SMK neutral mode,ESCL neutral mode,PDM neutral mode,
KIA>Select from vehicle\USA\Borrego(HM)\2009 - 2011\Remote	Program remote,

KIA\Select from vehicle\USA\Borrego(HM)\2009 -
2011\Immobilizer

Program key,Read key count,Read PIN code(46 chip),ECM neutral mode,SMARTRA neutral mode.