

## ADS1802 TOYOTA Scan Tool Function List

### Support early 53 systems as below:

1. Engine&Etc
2. Engine
  - Read Data Trouble Code
  - Read Historical Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
  - ACTURATOR TEST
3. ETC
  - Read Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
4. AirBag
  - Read Data Trouble Code
  - Read Historical Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
5. ABS
  - Read Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
  - ACTURATOR TEST
6. CCS ---
7. A/C
  - Read Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
  - ACTURATOR TEST
8. Combination Meter
  - Read Dynamic Parameter
  - ACTURATOR TEST
9. D-DOOR MOTOR ---
10. P-DOOR MOTOR ---
11. RL-DOOR MOTOR ---
12. RR-DOOR MOTOR ---
13. Main Switch
  - Read Dynamic Parameter
  - ACTURATOR TEST
14. Sliding roof

- Read Dynamic Parameter
- ACTURATOR TEST
- 15. EMPS
  - Read Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
- 16. Entry&Start
  - Read Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
  - ACTURATOR TEST
- 17. Intelligent Parking Assist ---
- 18. Immo.
  - Read Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
- 19. Main Body ---
- 20. Back Door
  - Read Dynamic Parameter
  - ACTURATOR TEST
- 21. HV Battery
  - Read Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
  - ACTURATOR TEST
- 22. Hybrid Control
  - Read Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
  - ACTURATOR TEST
- 23. Sequential M/T
  - Read Data Trouble Code
  - Read Historical Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
  - ACTURATOR TEST
- 24. Multi-Mode M/T
  - Read Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
  - ACTURATOR TEST
- 25. Stop And Go

- Read Data Trouble Code
- Clear Data Trouble Code
- Read Dynamic Parameter
- ACTURATOR TEST
- 26. Radar Cruise ---
- 27. Laser Cruise ---
- 28. E-ACM ---
- 29. Driver Seat
  - Read Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
  - ACTURATOR TEST
- 30. Tilt&telescopic
  - Read Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
  - ACTURATOR TEST
- 31. Mirror
  - Read Dynamic Parameter
  - ACTURATOR TEST
- 32. Mirror L
  - Read Dynamic Parameter
  - ACTURATOR TEST
- 33. Mirror R
  - Read Dynamic Parameter
  - ACTURATOR TEST
- 34. Gateway
  - Read Data Trouble Code
  - Read Historical Data Trouble Code
  - Clear Data Trouble Code
- 35. Passenger Door
  - Read Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
  - ACTURATOR TEST
- 36. Rear left Door
  - Read Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
  - ACTURATOR TEST
- 37. Rear right door
  - Read Data Trouble Code

- Clear Data Trouble Code
- Read Dynamic Parameter
- ACTURATOR TEST
- 38. Driver Door
  - Read Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
  - ACTURATOR TEST
- 39. Rear Right Seat
  - Read Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
  - ACTURATOR TEST
- 40. Rear Left Seat
  - Read Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
  - ACTURATOR TEST
- 41. Rear Seat Switch
  - Read Dynamic Parameter
- 42. Steering Pad Switch
  - Read Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
- 43. Clearance Sonar
  - Read Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
  - ACTURATOR TEST
- 44. Rain Sensor
  - Read Dynamic Parameter
- 45. Wiper
  - Read Dynamic Parameter
  - ACTURATOR TEST
- 46. Combination Switch
  - Read Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
- 47. Steering Lock
  - Read Data Trouble Code
  - Read Historical Data Trouble Code
  - Clear Data Trouble Code

- Read Dynamic Parameter
- ACTURATOR TEST
- 48. Passenger Seat
  - Read Dynamic Parameter
  - ACTURATOR TEST
- 49. Retractable Hardtop
  - Read Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
- 50. Night View
  - Read Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
  - ACTURATOR TEST
- 51. Accessory Gateway ---
- 52. HL Auto Leveling
  - Read Data Trouble Code
  - Clear Data Trouble Code
  - Read Dynamic Parameter
  - ACTURATOR TEST
- 53. Navigation ---