

Notes:

√	Functions is fully supported and already existed in former software version.
*	Functions is fully supported and newly added in current software version.
Number	Index number of the special function , you can find the name from the special function table.
	Functions left with blank is not supported.

Index	Specil Function Name	Index	Specil Function Name
1	VARIANT CODING	46	INITIAL CLUTCH CLOSED POSITION<ACT13>
2	THROTTLE BODY LEARNING	47	GEARSHIFTING GRID<ACT14>
3	FIRST INITIALIZATION	48	HYDRAULIC PUMP DISABLE<ACT15>
4	MANUAL OR AUTOMATIC P/N	49	HYDRAULIC PUMP ENABLE<ACT16>
5	AUTOMATIC D	50	BLEED CLUTCH PHASE 1<ACT17>
6	Set security code	51	BLEED CLUTCH PHASE 2<ACT18>
7	Input security code	52	BLEED HYDRAULIC UNIT<ACT19>
8	Program new system	53	FORCE NEUTRAL<ACT20>
9	Program keys	54	TEST ALL ACTUATORS<ACT21>
10	Erase keys	55	FORCE REVERSE<ACT22>
11	Replace immobiliser ECU	56	PURGE PRESSURE ACCUMULATOR<ACT23>
12	Replace engine ECU	57	SELF TEST
13	Program immobiliser VIN	58	Change keys Password
14	Program engine VIN	59	Key Registe
15	Reset engine ECU	60	Remote Match
16	Reset immobiliser	61	Key Code Register
17	EBC430 REPAIR CYCLE	62	Engine Register Vin Write
18	MISFIRE TESTS	63	Read Key Info
19	VARIANT CODING	64	First Initialization
20	FUNCTION CODING	65	Reset All adaptation
21	AUTO CRUISE TYPE	66	Reset Oxygen Control Adaptation
22	ADJUST IGNITION TIMING	67	Reset Throttle Adaptation
23	REPAIR BLEEDING	69	Reset Clutch Adapt
24	LOCKING OF IGNITION	70	Start Clutch Adaptation
25	UNLOCKING OF IGNITION	71	PREVE CFE/CVT
26	READ DATE OF AFTER SALES	72	PREVE IAFM+/MT
27	WRITE DATE OF AFTER SALES	73	PREVE IAFM+/CVT
28	ALTER IDLE SPEED	74	SAGA_FLX IAFM+/MT
29	READ OIL COUNTER	75	SAGA_FLX IAFM+/CVT
30	READ OIL CHANGE DATE	76	HCU Repair Bleed ESC
31	READ AFTER SALES DATE	77	STEERING ANGLE SENSOR CALIBRATION
33	WRITE DATE AFTER SALES OPERATION	78	Service Reminder Warning Indicator
34	REINIT OIL COUNTER	79	Normal Service Setting
35	REINIT AUTO ADAPTIVE	80	Optiaonal Service Setting

36	NOTE OIL COUNTER	81	Reset Clutch Adaptation
37	REINIT CONVERT LOCKUP ADAPTIVE	82	Start Clutch Adaptation
38	REINITIALISE PROGRAMMING	83	Date of ACU Installation
39	INJ CONTROL LOCKED	84	Steering Angle Sensor Calinration
40	INJ CONTROL UNLOCKED	85	Funtion Coding
41	LAST SERVICE DATE<ACT08>	86	Variant Coding
42	LAST CLUTCH REPLACEMENT<ACT09>	87	Clear Failure Counter
43	INITIAL CLUTCH CLOSED POSITION<ACT10>	88	Service Reminder Warning Indicator
44	RESET CLUTCH KISS POINT<ACT11>	89	Normal Service Setting
45	PROGRAMMING RESET<ACT12>	90	Optiaonal Service Setting

Vehicle	Mode	Module	ECU Info.	Read Codes	Erase Codes	Live Data	Active Test	Special Function
ARENA								
	ENGINE(ECU)							
		EMS400	√	√	√	√		1;2;3;4;5
	ATM(TCU)							
		MMC	√	√	√	√	√	
	IMMOBILIZER							
		SIEMENS	√	√	√	√	√	6;7;8;9;10;11;12;13;14;15;16;
CHANCELLOR								
	ENGINE							
		MMC	√	√	√	√	√	
	ATM(TCU)							
		MMC	√	√	√	√	√	
	ABS							
		TRW	√	√	√	√		17;
GEN-2								
	ENGINE							
		EMS700	√	√	√	√		2;3;18;19;20;21;22;4;5;
	ATM(TCU)							
		MMC	√	√	√	√	√	
	ABS							
		BOSCH ABS	√	√	√			23;
		TRW ABS	√	√	√	√		17;
	SRS							
		AC3	√	√	√			24;25;26;27;
	IMMO							
		SIEMENS	√	√	√	√	√	6;7;8;9;10;11;12;13;14;15;16;
JUARA								
	ENGINE(ECU)							
	ATM(TCU)							
		MMC	√	√	√	√	√	

	EPS							
		MMC EPS	√	√	√	√	√	
PERDANA								
	ENGINE(ECU)							
		MMC	√	√	√	√	√	
	ATM(TCU)							
		MMC	√	√	√	√	√	
	ABS							
		MMC	√	√	√	√	√	
		TEVES MK20	√	√	√	√		
PUTRA								
	ENGINE(ECU)							
		MMC	√	√	√	√	√	
	ATM(TCU)							
		MMC	√	√	√	√	√	
	ABS							
		MMC	√	√	√	√	√	
	IMMOBILIZER							
		MMC	√	√	√	√	√	
		SIEMENS	√	√	√	√	√	6;7;8;9;10;11;12;13;14;15;16;
SATRIA								
	ENGINE(ECU)							
		MMC	√	√	√	√	√	
		EMS400	√	√	√	√		1;2;3;4;5
	ATM(TCU)							
		MMC	√	√	√	√	√	
	ABS							
	TEVES MK20		√	√	√	√		
	IMMOBILIZER							
		MMC	√	√	√	√	√	
		SIEMENS	√	√	√	√	√	6;7;8;9;10;11;12;13;14;15;16;
WAJA								
	ENGINE							
		MMC	√	√	√	√	√	
		EMS700	√	√	√	√		2;3;18;19;20;21;22;4;5;
		RENAULT18	√	√	√	√		28;
		MMC	√	√	√	√	√	
		RENAULT18	√	√	√	√		29;30;31;32;33;34;35;36;37;
	ABS							
		TRW ABS	√	√	√	√		17;
	SRS-AIRBAG							
		AC3	√	√	√			24;25;26;27;

		AC6						
	IMMOBILIZER							
		MMC	√	√	√	√	√	
		SIEMENS	√	√	√	√	√	6;7;8;9;10;11;12;13;14;15;16;
WIRA								
	ENGINE(ECU)							
		MMC	√	√	√	√	√	
		EMS400	√	√	√	√		1;2;3;4;5
	ATM(TCU)							
		MMC	√	√	√	√	√	
	ABS							
		MMC	√	√	√	√	√	
	IMMOBILIZER							
		MMC	√	√	√	√	√	
		SIEMENS	√	√	√	√	√	6;7;8;9;10;11;12;13;14;15;16;
SAVVY								
	ENGINE(ECU)							
		RENAULT12	√	√	√	√		38;39;40;
	ATM(TCU)							
		RENAULT12	√	√	√	√		41;42;43;44;45;46;47;48;49;50;51;52;53;54;55;56;
	ABS							
		TEVES MK60	√	√	√	√		
	SRS-AIRBAG							
		AC3	√	√	√			24;25;26;27;
SATRIA NEO								
	ENGINE							
		EMS700	√	√	√	√		2;3;18;19;20;21;22;4;5;
	ATM(TCU)							
		MMC	√	√	√	√	√	
	ABS							
	SRS							
		AC3	√	√	√			24;25;26;27;
	IMMO							
		SIEMENS	√	√	√	√	√	6;7;8;9;10;11;12;13;14;15;16;
SAGA								
	ENGINE							
		EMS700	√	√	√	√		2;3;18;19;20;21;22;4;5;
	ATM(TCU)							
		MMC	√	√	√	√	√	
	SRS							
		AC3	√	√	√			24;25;26;27;

	IMMO							
		SIEMENS	√	√	√	√	√	6;7;8;9;10;11;12;13;14;15;16;
EXORA								
	ENGINE(ECU)							
		EMS700	√	√	√	√		2;3;18;19;20;21;22;4;5;
	ATM(TCU)							
		MMC	√	√	√	√	√	
	ABS							
		TRW EBC450	√	√				
	BCM							
		BCF Continental	√	√	√	√		57;
	IMMOBILIZER							
		SIEMENS	√	√	√	√	√	6;7;8;9;10;11;12;13;14;15;16;
INSPIRA								
	ENGINE		√	√	√	√		
	SRS-AIRBAG		√	√	√	√		
	TRANSMISSION		√	√	√	√		
	ABS		√	√	√	√		
	ETACS		√	√	√	√		
	METER		√	√	√	√		
	AUTO CRUISE		√	√	√	√		
	HVAC		√	√	√	√		
	KOS/IMMO							58;59;60;61;62;63;
	Service Reset		√	√	√	√		
SAGA FLX								
	ENGINE		√	√	√	√		64;65;66;67;68;
	ABS		√	√	√	√		71;72;73;74;75;76;77;
	SRS							
		ACU3	√	√	√			
		AC3	√	√	√			24;25;26;27;
	IMMO							9;10;63;
PREVE								
	ENGINE		√	√	√	√		64;65;66;67;68;
	A/T		√	√	√			69;70;
	ABS		√	√	√	√		71;72;73;74;75;76;77;
	BCM		√	√	√	√		
	SRS		√	√	√			
	IMMO							9;10;63;
	METER		√	√	√	√		78,79,80
	Gear Shift Lock		√	√	√			
EXORA Bold								
	ENGINE		√	√	√	√		64;65;66;67;68;
	A/T		√	√	√			69;70;

	ABS		✓	✓	✓	✓		
	SRS		✓	✓	✓			
	BCM		✓	✓	✓	✓		57;
	IMMO							9;10;63;
PERSONA								
	ENGINE							
		EMS700	✓	✓	✓	✓		2;3;18;19;20;21;22;4;5;
	ATM(TCU)							
		MMC	✓	✓	✓	✓	✓	
	ABS							
		BOSCH_ABS	✓	✓	✓			23;
	SRS							
		AC3	✓	✓	✓			24;25;26;27;
	IMMO							
		SIEMENS	✓	✓	✓	✓	✓	6;7;8;9;10;11;12;13;14;15;16;
SUPRIMA S								
	ENGINE		✓	✓	✓	✓		64;65;66;67;68;
	A/T		✓	✓	✓			69;70;
	ABS		✓	✓	✓	✓		71;72;73;74;75;76;77;
	BCM		✓	✓	✓	✓		
	SRS		✓	✓	✓			
	METER		✓	✓	✓	✓		78;79;80;
	Gear Shift Lock		✓	✓	✓			
IRIZ								
	ENGINE		✓	✓	✓	✓	✓	
	AT		✓	✓	✓	✓		81;82;
	ABS		✓	✓	✓	✓		
	SRS		✓	✓	✓	✓	✓	83;
	Gear Shift Lock		✓	✓	✓			
	Power Steering		✓	✓	✓	✓	✓	84;
	BCM		✓	✓	✓	✓	✓	85;86;87;
	Meter		✓					88;89;90;
	Immo-Alarm		✓	✓	✓	✓		